



BarnesBrinkcraft
Serving the Norfolk Broads since 1967


**WELCOME TO
CONCERTO 3**

THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	CONCERTO 3

TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	35FT (10.67M)
WIDTH	12FT (3.66M)
STEERING	DUAL STEERING
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	8FT (2.44M)
BRIDGE CLEARANCE	<p>WILL NOT PASS UNDER WROXHAM BRIDGE, POTTER HEIGHAM BRIDGE OR BECCLES OLD BRIDGE</p> <p>Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully</p>
BERTHS	3 DOUBLES IN <u>2 CABINS</u> & SALOON
BED SIZES	SEE BOAT LAYOUT
HOW TO MAKE UP BED IN SALOON	MOVE TABLE, PULL BOTTOM OF SOFA OUT PLACE CUSHIONS ON TOP
BATHROOM	1 BATHROOM & 1 ENSUITE WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - SWITCH ON SIDE WALL BACK SHOWER - BUTTON IN SHOWER CUBICLE
COOKING FACILITIES	ELECTRIC 2 RING MICRO COMBI OVEN (SMART OVEN)
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH SMALL FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTOR 5000w
HEATING	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	6 2 FORWARD CABIN, 2 GALLEY, 2 REAR CABIN
WIFI	YES
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	6 (4+2)
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • SEPARATE SHOWER CUBICLE & FRONT WET ROOM • HAIR DRYER • LICENSED FOR 9 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

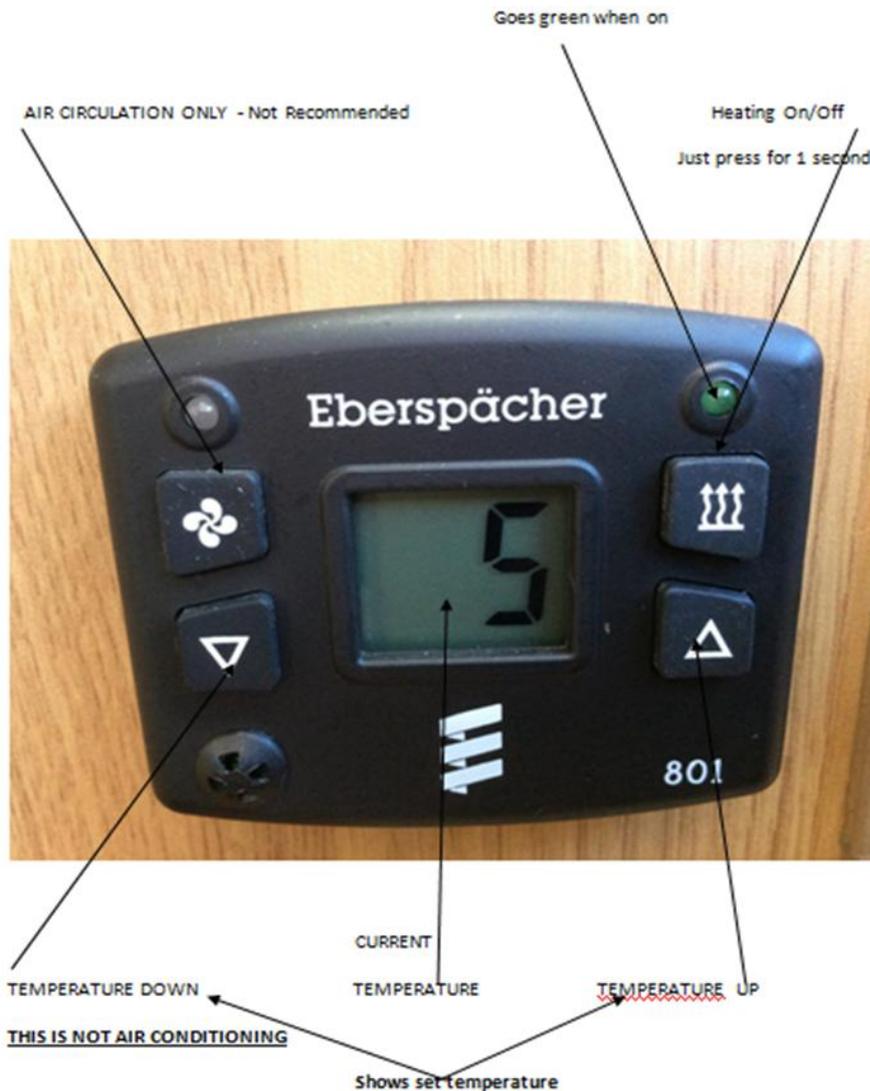

HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON AS SHOWN ABOVE.ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.SET THE TEMPERATURE TO MAXIMUM, AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY START ENGINE TO CHARGE BATTERIES.IF THIS DOES NOT WORK PLEASE CALL THE ON CALL ENGINEER. 01603 782625 .WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.


WIFI

This boat is connected to our new unlimited WiFi. To connect to your onboard WiFi, you will need to go into your device's WiFi settings and select: "BarnesBrinkcraft WiFi"

You should then be taken to a login page that asks you to accept the Terms and Conditions.

Concerto

Fri/Mon (1+6) or Sat/Tues (2, 3, 4 +5) start – 3 doubles in 2 cabins & saloon - 2 toilets/showers in 1 bathroom & 1 ensuite

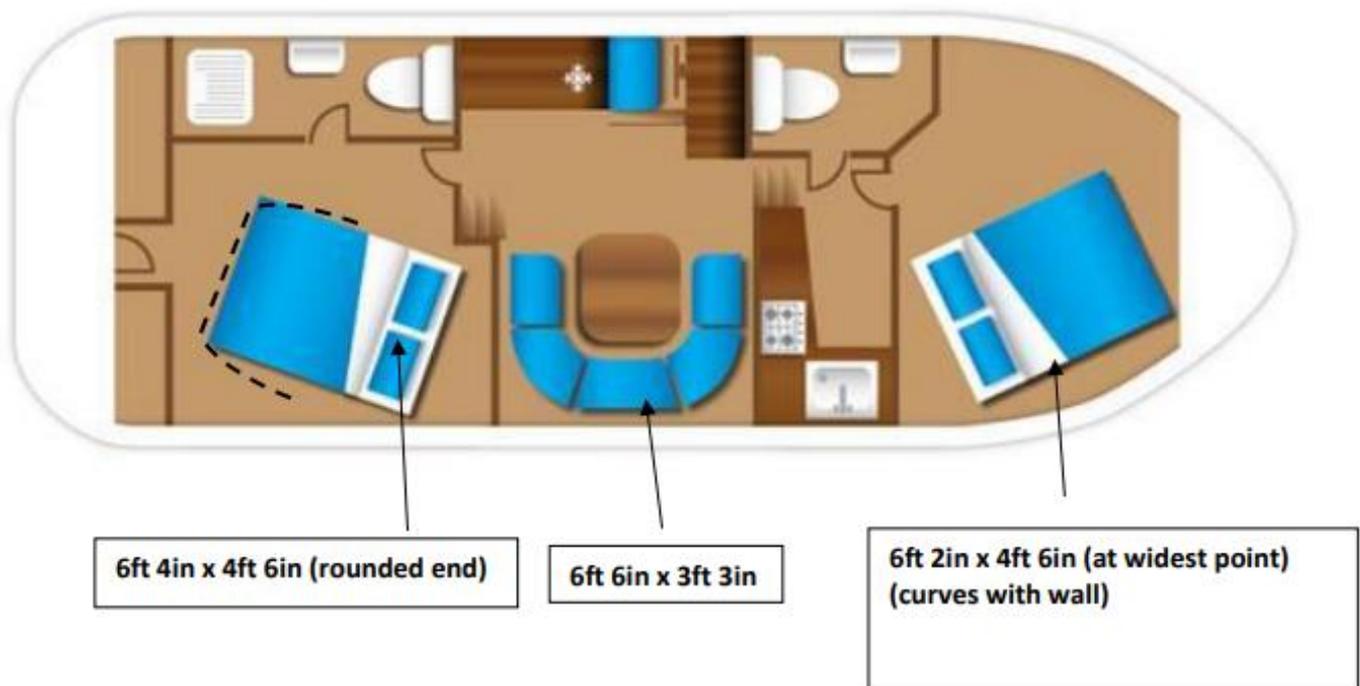


Throttle Controls

This boat has upper and lower steering positions. Your boat will have the throttle controls pictured below in both positions.

The throttle controls the speed of the boat. The further forward you push it the faster it will go and the further back you pull it the faster it will go in reverse.

How to start your boat:

1. check your throttle is in neutral. If your boat has dual control check both throttles are in neutral. You can check this by making sure both the small triangle and notch on the inside on the throttle are lined up.
2. Put keys in ignition and turn to start the boat, both engine lights will come on. (The top two lights)
3. Press 'Command' on the controls you will

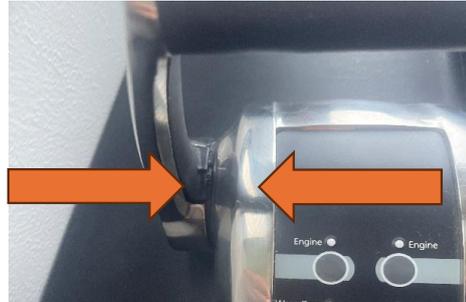

be using (either upper or lower helm). You'll need to push the button for 1 second, and you will see the blue light come on above the command button. If the lights don't come on it means the boat is probably not in neutral, check and try again.

4. The 'Warm/Sync' light will now be flashing. This means the gear control is disengaged.

If you push the throttle forward it will rev the engine without moving.

5. Push the 'Warm/Sync' button (for 1 second) and the gear will be engaged. You can now drive the boat with the throttle.
6. Before untying and leaving the moorings gentle test the throttle is working in forward and reverse by gently pushing the throttle slightly in both directions. Once you're confident the boat is responding to the throttle you can untie from the moorings and head off.



Changing driving position:

1. When changing from one control to another you need to make sure BOTH throttles are in neutral (step 1 above)
2. Move to your desired driving position.
3. Hold the command button on the throttle for 1 second to engage, the light will come on when the command is engaged.
4. You can now control the boat from this driving position.

We recommend only changing controls/steering positions while the boat is moored. If you have just changed controls while moored, gently check forward and reverse gear at the control you wish to use are working correctly, before untying the boat and leaving the mooring.