



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
ENCORE-PLUS 4

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	ENCORE-PLUS 4 (ELITE CLASS)
TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	28FT 6IN (8.69M)
WIDTH	11FT 6IN (3.50M)
STEERING	SINGLE FORWARD STEERING
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	6FT 10IN (2.09M)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	PASSES UNDER ALL BRIDGES <u>AT SUITABLE TIDES</u>
BERTHS	2 DOUBLES IN <u>1 CABIN</u> & SALOON

BED SIZES	SEE BOAT LAYOUT
HOW TO MAKE UP BED IN SALOON	TAKE TABLE AWAY PULL OUT PANEL UNDERNEATH USE SOFA CUSHIONS TO MAKE UP BED
BATHROOM	1 BATHROOM WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	SWITCH ON PANEL BESIDE TOILET
COOKING FACILITIES	GAS 4 RING OVEN & GRILL MICROWAVE
FRIDGE/FREEZER	LARGE FRIDGE UNDER CAB
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	LIMITED 240v POWER SHORE INVERTER 2000w SOLAR
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	4

WIFI	YES (LIMITED)
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	4 (2+2)
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • SINGLE LEVEL INTERIOR • SPLIT SLIDING CANOPY • FORWARD WELL AREA TO SIT AND ENJOY THE VIEWS • DVD PLAYER • QUIET HYDRUALIC DRIVE ENGINE • 'WALK AROUND' DOUBLE BERTH • HAIR DRYER • BLUETOOTH MUSIC SYSTEM • WIRELESS PHONE CHARGER • TOUCHSCREEN DASH • IMPROVED ENGINE/HYDRAULICS/BATTERY MONITORING OVER ENCORES 1 & 2 • LICENSED FOR 6 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION


To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Once the voucher runs out you can purchase more data via the online portal. (prices online)

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL.

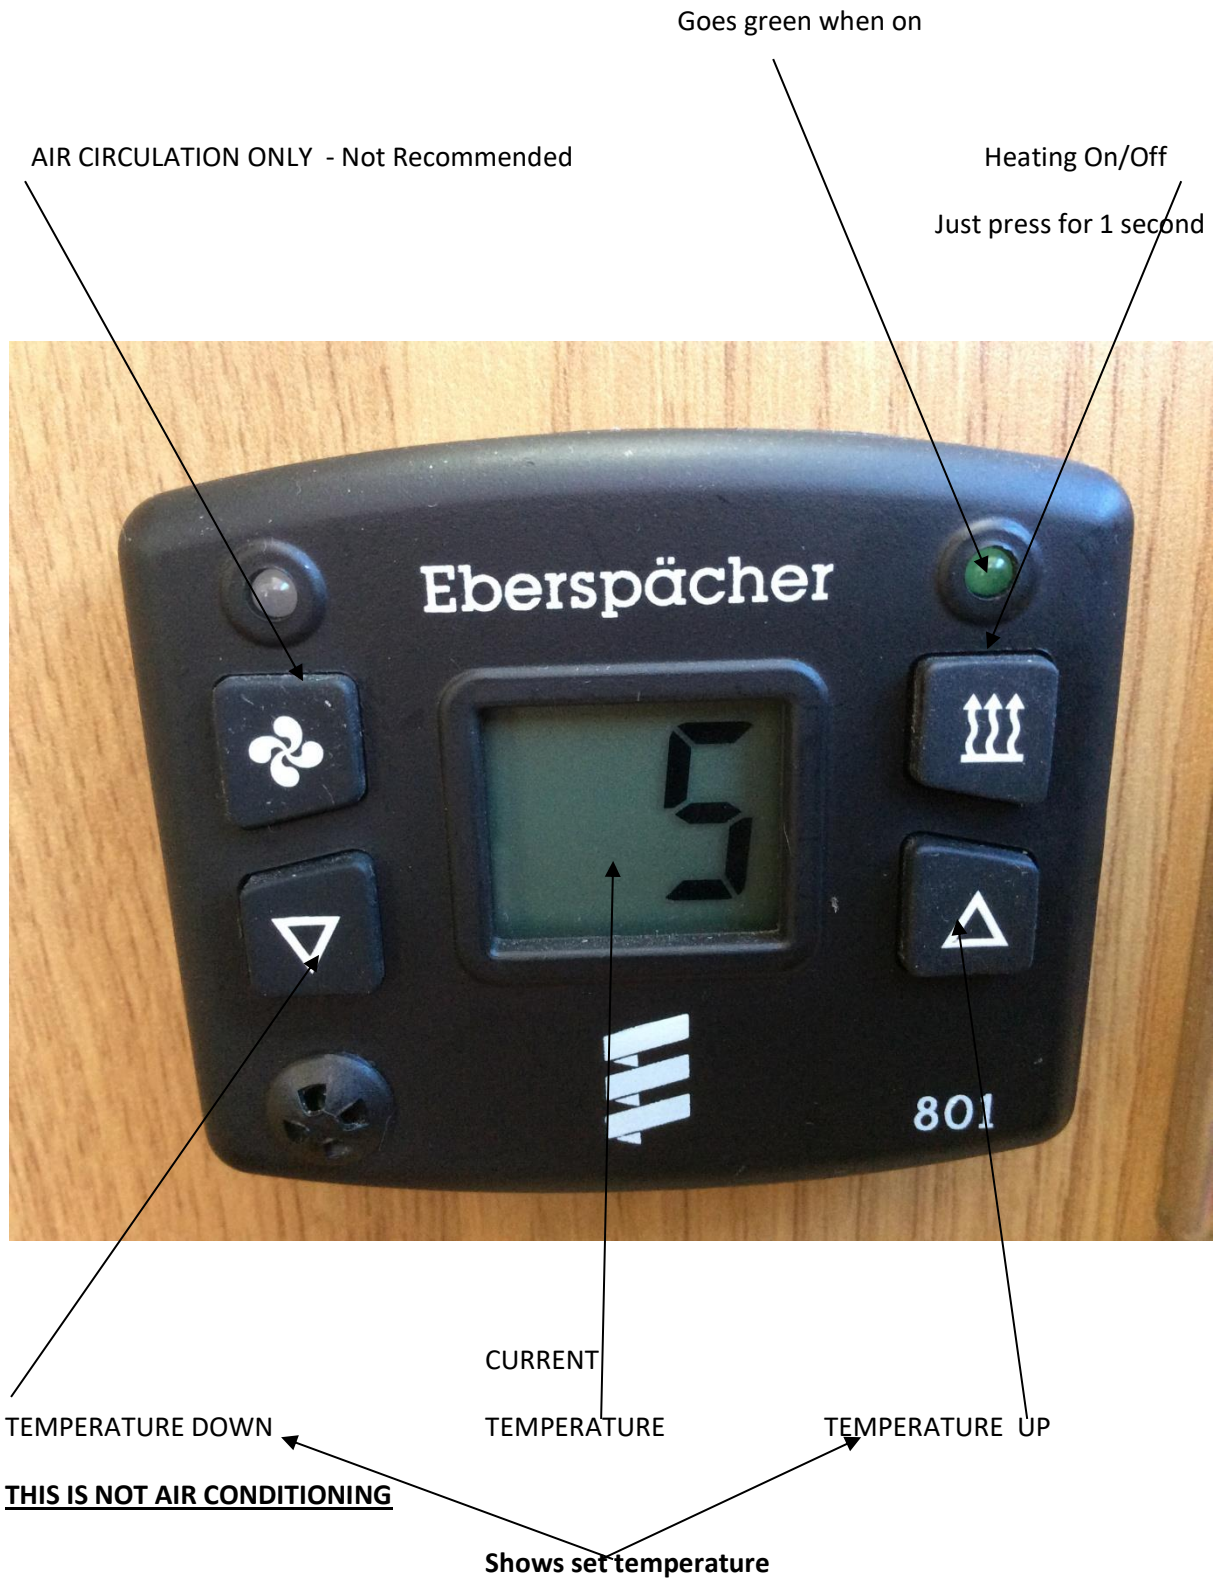

How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Gas System Operation

The cooker on this boat burns Liquefied Petroleum Gas (LPG). The gas comes from one or two cylinders located in a locker outside the boat. The gas has taps to isolate the gas on the top of the bottles, at an isolator tap in the galley and on the cooker.

1. To light the cooker, check that the connected bottle in the gas locker is switched on. All gas valves turn anti-clockwise for on.
2. The cooker isolator tap in the galley also needs to be on. Check the position against the label next to it.
3. To light the cooker first press the ignition button **OR** hold a lit match next to the selected burner.
4. Turn the tap anti-clockwise and hold it in to light the ring. Hold the tap in for a few more seconds and release it.
5. If the ring goes out when you release the tap you may need to repeat 3 & 4 and hold it in a little longer.
6. Make sure the cooker is switched off and the flame is out when you have finished.
7. For added safety switch of the gas cylinders in the locker.

What to do if you smell gas:

- 1. Switch of the gas cylinders in the gas locker.**
- 2. Contact the boat yard on 01603 782625 and speak to an on call engineer.**
- 3. Open doors and windows to ventilate the boat if it is safe to do so.**

Do's and Don'ts

Do make sure you are happy with the operation of the gas system during your trial run.

Do make sure the cooker is correctly turn off and isolated when not in use.

Do open a window or door when the cooker is in use to provide extra ventilation.

Do contact the boat yard if you have any concerns about the gas system and or ventilation.

Do not use any other fuel burning appliances that are not supplied with the boat. For example do not use gas cooking appliances, generators or barbeques onboard, if in doubt contact the boat yard for further advice.

Do not leave the cooker on unattended.

Do not use the cooker when underway. The movement of the boat could cause hot pans to spill or be knocked over.

Do not block any air vents even if there are drafts.

Do not Use the gas cooker to heat the boat.

Encore

Fri/Mon (1) or Sat/Tues (2) start - 2 doubles in 1 cabin & saloon - 1
toilets/showers in 1 bathroom

