



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
HARMONY 2

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	HARMONY 2 (MID-RANGE CLASS)
TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	44FT (13.4M)
WIDTH	12FT (3.66M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS UP	
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS LOWERED	7FT (2.14M)
BRIDGE CLEARANCE	WILL NOT PASS UNDER POTTER HEIGHAM BRIDGE WILL PASS UNDER WROXHAM BRIDGE <u>AT SUITABLE TIDES</u>
BERTHS	4 DOUBLES <u>IN 4 CABINS</u>

BED SIZES	SEE BOAT LAYOUT
BATHROOM	1 BATHROOM & 2 ENSUITE WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - BUTTON ON BACK WALL MIDDLE SHOWER -SELF-DRAINING BACK SHOWER - SELF-DRAINING
COOKING FACILITIES	ELECTRIC 2 RING, LARGE OVEN WITH GRILL MICROWAVE
FRIDGE/FREEZER	UNDER CABINET FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240V POWER FROM GENERATOR, INVERTOR & SHORE POWER SHORE INVERTER 3000w GEN
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	6
WIFI	YES (LIMITED)

THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	8
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • OPEN PLAN SALOON WITH SLIDING CANOPY FORMS LIGHT AND AIRY SOCIABLE LIVING SPACE • 3 TELEVISIONS • DVD PLAYER • RAISED STEERING POSITION • CABINS & BATHROOMS LEAD OFF SALOON AREA • REAR FOOTWELL IS LARGE FOR EASY ACCESS • IDEAL FOR FISHING • HAIR DRYER • LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION

To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Turn heating on

Thermostat control



Off switch

Turn fan on

How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Harmony

Fri/Mon (1) & Sat/Tues (2+3) start - 4 doubles in 4 cabins - 3 toilets/showers in 1 bathroom & 2 ensuite

