

WELCOME TO
MELODY 2

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	MELODY 2
TURNAROUND DAYS	(MID-RANGE CLASS) SAT/TUES
LENGTH OF BOAT	44FT (13.41M)
WIDTH	12FT (3.66M)
STEERING	DUAL
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	N/A
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	8FT 2IN (2.49M)
BRIDGE CLEARANCE	WILL NOT PASS UNDER WROXHAM BRIDGE POTTER HEIGHAM BRIDGE BECCLES OLD BRIDGE
BERTHS	3 DOUBLES & 1 SINGLE IN <u>3 CABINS</u>

BED SIZES	SEE BOAT LAYOUT
BATHROOM	3 ENSUITE BATHROOMS
BATHROOM	WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - BUTTON ON BACK WALL
	MIDDLE SHOWER - SIDE OF SINK
	BACK SHOWER - SIDE OF SINK
COOKING FACILITIES	ELECTRIC 2 RING, LARGE OVEN & GRILL
	MICROWAVE
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER
	SHORE INVERTER 8000w
HEATER	HEATER RUNS OFF THE DIESEL
	FANS RUN OFF THE ELECTRIC
	INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	6
WIFI	YES (LIM ITED)
BOAT REGISTRATION	230Н
DOAT REGISTRATION	23011

THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	7
ADDITIONAL INFORMATION	DVD PLAYER ONE SPACIOUS CABIN THAT SLEEPS 3 LARGE SOCIABLE SALOON OUTSIDE SEATING AREA HAIR DRYER LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION

To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Once the voucher runs out you can purchase more data via the online portal. (prices online)

HEATING CONTROL

YOUR BOAT WILL BE EQUIPPED WITH THIS HEATING CONTROL.

0 - IS OFF

TURN THUMB DIAL CLOCKWISE TO INCREASE HEATING.



How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Melody

Fri/Mon (1) or Sat/Tues (2+3) start - 3 doubles & 1 single in 3 cabins - 3 toilets/showers in 3 ensuites

