



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
MELODY 3

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	MELODY 3 (MID-RANGE CLASS)
TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	44FT (13.41M)
WIDTH	12FT (3.66M)
STEERING	DUAL
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	N/A
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	8FT 2IN (2.49M)
BRIDGE CLEARANCE	WILL NOT PASS UNDER WROXHAM BRIDGE POTTER HEIGHAM BRIDGE BECCLES OLD BRIDGE
BERTHS	3 DOUBLES & 1 SINGLE IN <u>3 CABINS</u>

BED SIZES	SEE BOAT LAYOUT
BATHROOM	3 ENSUITE BATHROOMS WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - BUTTON ON BACK WALL MIDDLE SHOWER - SIDE OF SINK BACK SHOWER - SIDE OF SINK
COOKING FACILITIES	ELECTRIC 2 RING, LARGE OVEN & GRILL MICROWAVE
FRIDGE/FREEZER	UNDER CABINET FRIDGE WITH <u>NO FREEZER</u>
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 8000w
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	6
WIFI	YES (LIMITED)

THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	7
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • DVD PLAYER • ONE SPACIOUS CABIN THAT SLEEPS 3 • LARGE SOCIABLE SALOON • OUTSIDE SEATING AREA • HAIR DRYER • LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION

To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Once the voucher runs out you can purchase more data via the online portal. (prices online)

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL.

Goes green when on

AIR CIRCULATION ONLY - Not Recommended

Heating On/Off
Just press for 1 second



CURRENT

TEMPERATURE

TEMPERATURE DOWN

TEMPERATURE UP

THIS IS NOT AIR CONDITIONING

Shows set temperature

How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Melody

Fri/Mon (1) or Sat/Tues (2+3) start - 3 doubles & 1 single in 3 cabins - 3 toilets/showers in 3 ensuites

