



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
ROMANY 1

BOAT INFORMATION

| | |
|---|--|
| THE BOATYARDS NAME IS | BARNES BRINKCRAFT in WROXHAM |
| BOATYARDS TELEPHONE NUMBER | 01603 782625 – 8am to 5pm |
| AFTER HOURS TELEPHONE NUMBER | 01603 782625 – option one |
| THIS BOAT IS NAMED | ROMANY 1 (MID-RANGE CLASS) |
| TURNAROUND DAYS | SAT/TUES |
| LENGTH OF BOAT | 42FT (12.80M) |
| WIDTH | 12FT (3.66M) |
| STEERING | SINGLE |
| BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS UP | 8FT 6IN (2.59M) |
| BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS LOWERED | 6FT 10IN (2.09M) |
| BRIDGE CLEARANCE | WILL NOT PASS UNDER POTTER HEIGHAM WILL PASS UNDER WROXHAM BRIDGE <u>AT SUITABLE TIDES</u> |
| BERTHS | 3 DOUBLES & 2 SINGLES OR 4 DOUBLES & 1 SINGLE IN <u>3 CABINS</u> & SALOON |

| | |
|--------------------------------|---|
| BED SIZES | SEE BOAT LAYOUT |
| BATHROOM | 1 BATHROOM & 1 ENSUITE WITH TOILET/SHOWER & 1 BATH |
| HOW TO DRAIN SHOWER | FRONT SHOWER - SWITCH ON BACK WALL NEXT TO BATH BACK SHOWER - SWITCH BELOW SINK |
| COOKING FACILITIES | ELECTRIC 4 RING, LARGE OVEN & COMBINATION GRILL MICROWAVE |
| FRIDGE/FREEZER | 2 UNDER COUNTER FRIDGES WITH FREEZER BOX |
| BOW THRUSTER? | NO |
| ELECTRIC ANCHOR WINCH? | NO |
| POWER | 240v POWER SHORE INVERTER 3000w GENERATOR & SOLAR |
| HEATER | HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL |
| NUMBER OF POWER SOCKETS | 6 |
| WIFI | NO |

| | |
|--|--|
| THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS | 9 (8+1) |
| ADDITIONAL INFORMATION | <ul style="list-style-type: none">• DVD PLAYER• HAIR DRYER• ELECTRIC CANOPY• STEERING IN OPEN PLAN SALOON• IDEAL FOR FAMILIES WITH SMALL CHILDREN OR GROUPS OF FRIENDS• LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE |

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

CLICK THE ON BUTTON FOR HEATING.

TURN THE DIAL CLOCKWISE TO INCREASE HEATING.



HEATING CONTROL

YOUR BOAT WILL BE EQUIPPED WITH THIS HEATING CONTROL.

0 - IS OFF

TURN THUMB DIAL CLOCKWISE TO INCREASE HEATING.



How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Romany 1

Sat/Tues start - 3 singles & 3 doubles or 4 doubles & 1 single in 3 cabins & saloon -

2 toilets/showers & 1 small bath in 1 bathroom & 1 en-suite

