



**BarnesBrinkcraft**  
Serving the Norfolk Broads since 1967

WELCOME TO  
ROYALE 3

# BOAT INFORMATION

|  |   |
|--|---|
| THE BOATYARDS NAME IS                        | BARNES BRINKCRAFT in WROXHAM  |
| BOATYARDS TELEPHONE NUMBER                   | 01603 782625 – 8am to 5pm   |
| AFTER HOURS TELEPHONE NUMBER                 | 01603 782625 – option one   |
| THIS BOAT IS NAMED                           | ROYALE 3<br>("NO FRILLS" CLASS)   |
| TURNAROUND DAYS                              | SAT/TUES  |
| LENGTH OF BOAT                               | 30.5FT (9.2M)   |
| WIDTH  | 11FT (3.35M)  |
| STEERING                                     | SINGLE  |
| BRIDGE CLEARANCE HEIGHT WITH SCREENS UP      | 8FT 6IN (2.59M)   |
| BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED | N/A   |
| BRIDGE CLEARANCE                             | WILL NOT PASS UNDER WROXHAM BRIDGE,<br>POTTER HEIGHAM BRIDGE<br>OR BECCLES OLD BRIDGE |
| BERTHS                                       | 2 DOUBLES<br>IN OPEN PLAN SALOON  |

|                                |  |
|--------------------------------|--|
| <b>BED SIZES</b>               | <b>SEE BOAT LAYOUT</b>   |
| <b>BATHROOM</b>                | <b>1 BATHROOM<br/>WITH<br/>TOILET/SHOWER</b>   |
| <b>HOW TO DRAIN SHOWER</b>     | <b>BUTTON ABOVE SHOWER CONTROLS</b>  |
| <b>COOKING FACILITIES</b>      | <b>GAS 4 RING, SMALL OVEN &amp; COMBINATION GRILL</b>  |
| <b>FRIDGE/FREEZER</b>          | <b>SMALL FRIDGE WITH ICEBOX</b>  |
| <b>BOW THRUSTER?</b>           | <b>YES</b>   |
| <b>ELECTRIC ANCHOR WINCH?</b>  | <b>NO</b>  |
| <b>POWER</b>                   | <b>LIMITED 240v POWER</b><br><br><b>SHORE INVERTER 1600w</b>   |
| <b>HEATER</b>                  | <b>HEATER RUNS OFF THE DIESEL<br/>FANS RUN OFF THE ELECTRIC</b><br><br><b>INSTRUCTIONS INCLUDED IN YOUR MANUAL</b> |
| <b>NUMBER OF POWER SOCKETS</b> | <b>3</b>   |
| <b>WIFI</b>                    | <b>NO</b>  |

|  |  |
|--|--|
| <b>THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS</b> | <p style="text-align: center;"><b>4</b><br/><b>(2+2)</b></p>   |
| <b>ADDITIONAL INFORMATION</b>                        | <ul style="list-style-type: none"> <li>• <b>RAISED STEERING POSITION IN SUN-TRAP COCKPIT</b></li> <li>• <b>OUTSIDE SPACE WITH LARGE OPENING SUN HATCH</b></li> <li>• <b>DVD PLAYER</b></li> <li>• <b>IDEAL FOR COUPLES</b></li> <li>• <b>REAR DOUBLE HAS SITTING HEADROOM ONLY</b></li> <li>• <b>HAIR DRYER</b></li> <li>• <b>LICENSED FOR 6 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE</b></li> </ul> |

### How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

## HEATING CONTROL

YOUR BOAT WILL BE EQUIPPED WITH THIS HEATING CONTROL.

0 - IS OFF

TURN THUMB DIAL CLOCKWISE TO INCREASE HEATING.



## **Gas System Operation**

The cooker on this boat burns Liquefied Petroleum Gas (LPG). The gas comes from one or two cylinders located in a locker outside the boat. The gas has taps to isolate the gas on the top of the bottles, at an isolator tap in the galley and on the cooker.

1. To light the cooker, check that the connected bottle in the gas locker is switched on. All gas valves turn anti-clockwise for on.
2. The cooker isolator tap in the galley also needs to be on. Check the position against the label next to it.
3. To light the cooker first press the ignition button **OR** hold a lit match next to the selected burner.
4. Turn the tap anti-clockwise and hold it in to light the ring. Hold the tap in for a few more seconds and release it.
5. If the ring goes out when you release the tap you may need to repeat 3 & 4 and hold it in a little longer.
6. Make sure the cooker is switched off and the flame is out when you have finished.
7. For added safety switch of the gas cylinders in the locker.

### **What to do if you smell gas:**

- 1. Switch of the gas cylinders in the gas locker.**
- 2. Contact the boat yard on 01603 782625 and speak to an on call engineer.**
- 3. Open doors and windows to ventilate the boat if it is safe to do so.**

### **Do's and Don'ts**

**Do** make sure you are happy with the operation of the gas system during your trial run.

**Do** make sure the cooker is correctly turn off and isolated when not in use.

**Do** open a window or door when the cooker is in use to provide extra ventilation.

**Do** contact the boat yard if you have any concerns about the gas system and or ventilation.

**Do not** use any other fuel burning appliances that are not supplied with the boat. For example do not use gas cooking appliances, generators or barbeques onboard, if in doubt contact the boat yard for further advice.

**Do not** leave the cooker on unattended.

**Do not** use the cooker when underway. The movement of the boat could cause hot pans to spill or be knocked over.

**Do not** block any air vents even if there are drafts.

**Do not** Use the gas cooker to heat the boat.

## Royale - How to put together the front double



Using the screws on the leg of the table, lower it until it sits level with the base of the seating (as seen below)





Lift flooring panel up from step and place at foot of the table,  
forming the base of the bed



Lay cushions on top to form  
the bed



# Royale

Fri/Mon (1+2) or Sat/Tues (3+4) start - 2 doubles in open-plan saloon - 1 toilet/shower in 1 bathroom

