



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
SONNET 3

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	SONNET 3 (ELITE CLASS)
TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	31FT (9.45M)
WIDTH	12FT (3.66M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	6FT 7IN (2.01M)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	WILL PASS UNDER ALL BRIDGES <u>AT SUITABLE TIDES</u>
BERTHS	2 DOUBLES IN <u>1 CABIN & SALOON</u>

BED SIZES	SEE BOAT LAYOUT
BATHROOM	SEPERATE SHOWER & SEPARATE TOILET
HOW TO DRAIN SHOWER	SWITCH ON THE WALL
COOKING FACILITIES	ELECTRIC 2 RING & MICROWAVE COMBI
FRIDGE/FREEZER	UNDER CABINET FRIDGE WITH ICE BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 5000w
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	6
WIFI	YES (LIMITED)

<p>THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS</p>	<p>4 (2+2)</p>
<p>ADDITIONAL INFORMATION</p>	<ul style="list-style-type: none"> • SINGLE LEVEL INSIDE & WIDE SIDE DECK FOR EASY ACCESS • FORWARD STEERING • SPLIT SLIDING CANOPY OVER AIRY SALOON • "WALKAROUND" DOUBLE BERTH • HAIR DRYER • LICENSED FOR 7 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION


To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Once the voucher runs out you can purchase more data via the online portal. (prices online)

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL.

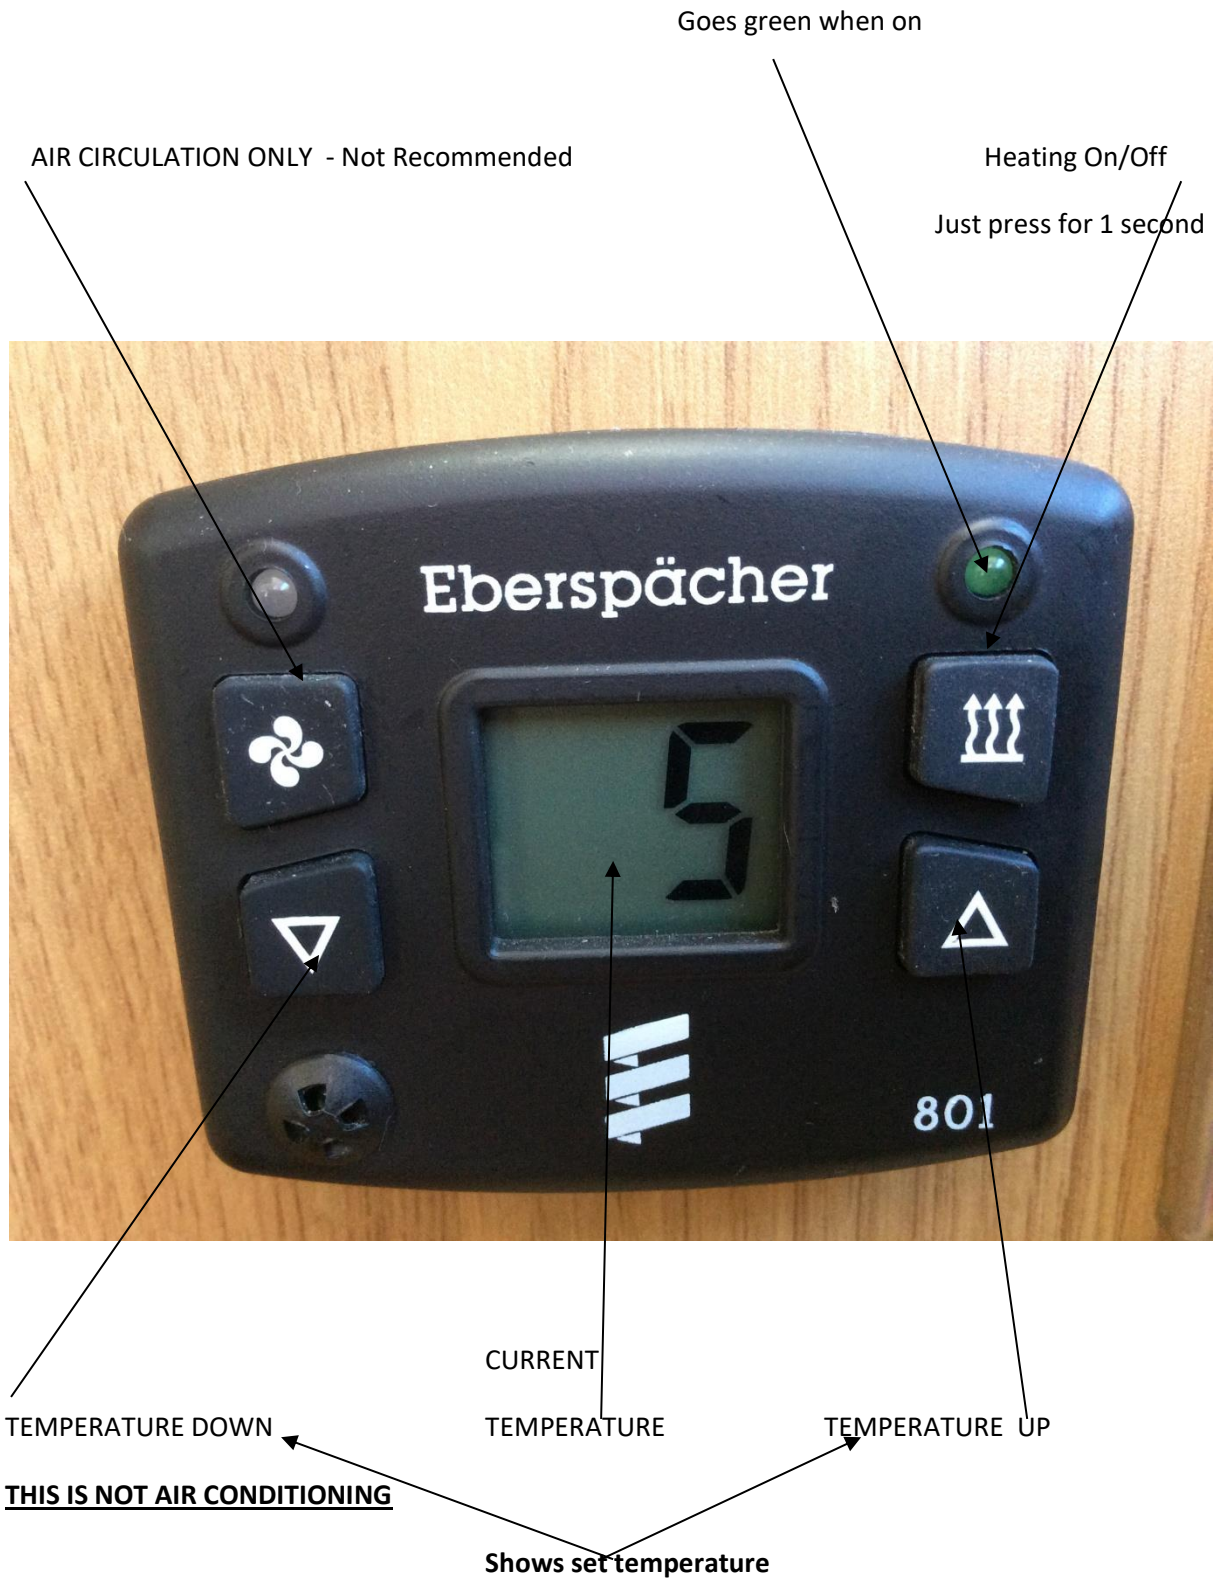

How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.


Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Sonnet

- Fri/Mon (1) or Sat/Tues (2+3) start - 2 doubles in 1 cabin & saloon - separate shower & toilet -

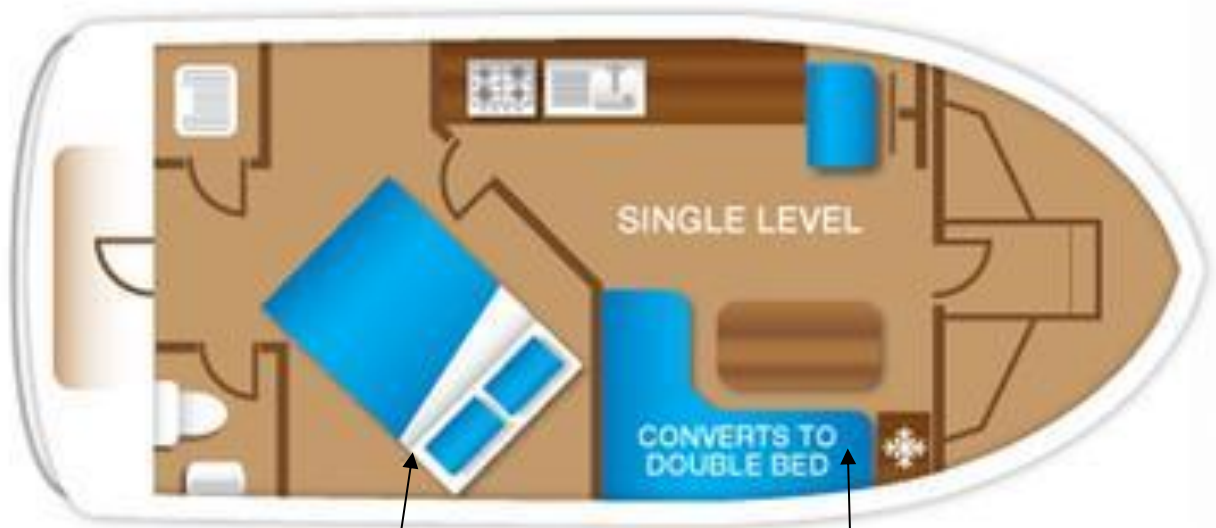

6ft 6in (centre length) x 4ft 1in
(4ft 3in length before the curve)

6ft 6in x 3ft 9in