

WELCOME TO
TEMPO 1

BOAT INFORMATION

BARNES BRINKCRAFT in WROXHAM
01603 782625 – 8am to 5pm
01603 782625 – option one
TEMPO 1
(ELITE CLASS)
SAT/TUES
35FT (10.67M)
12FT (3.66M)
DUAL
N/A
8FT (2.44M)
NOTE: ALSO LOWER AERIAL
WILL NOT PASS UNDER WROXHAM BRIDGE POTTER HEIGHAM BRIDGE BECCLES OLD BRIDGE
3 DOUBLE BERTHS IN 2 CABINS & SALOON

BED SIZES	SEE BOAT LAYOUT
HOW TO MAKE UP SALOON BED	DROP ELECTRIC TABLE LEVEL WITH SEATS
	LIFT UP CENTRE SEAT TO FIND THE CUSHION
	SLOT CUSHION IN
BATHROOM	1 BATHROOM (WET ROOM) & 1 ENSUITE
	WITH
	TOILET/SHOWER
HOW TO DRAIN SHOWER	BACK SHOWER - SWITCH INSIDE SHOWER
	WET ROOM - SWITCH ON TOILET PANEL
COOKING FACILITIES	ELECTRIC 2 RING &
	MICROWAVE COMBI (SAMSUNG MC28M6075 - INSTRUCTION MANUAL IN DRAWER)
FRIDGE/FREEZER	UNDER COUNTER FRIDGE
	WITH
	FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC
	INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	10

WIFI	YES (LIMITED)
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	6 (4+2)
ADDITIONAL INFORMATION	 DVD PLAYER HAIR DRYER WIRELESS PHONE CHARGERS BLUETOOTH SOUND SYSTEM IDEAL FOR 2 COUPLES FRONT BATHROOM IS A WET ROOM FUEL-EFFICIENT LOW EMISSION ENGINE, UTILISING SOLAR PANELS & LATEST LITHIUM BATTERIES FOR A FASTER CHARGE ADDITIONAL ROOF LIGHTS & ELECTRIC SUNROOF FOR MORE INTERIOR LIGHT FRAMELESS BONDED WINDOWS SIMILAR LAYOUT TO CONCERTO BUT WITH MORE SEATING SPACE IN THE SALOON LICENSED FOR 9 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION

To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Once the voucher runs out you can purchase more data via the online portal. (prices online)

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

CLICK THE ON BUTTON FOR HEATING.

TURN THE DIAL CLOCKWISE TO INCREASE HEATING.



How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Tempo

- Sat/Tues start - 3 doubles in 2 cabins & saloon - 2 toilets/showers in 1 bathroom & 1 wet room -

