



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

**WELCOME TO
LULLABY 3**

THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	LULLABY 3 (MID-RANGE CLASS)

TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	44FT (13.41M)
WIDTH	12FT (3.66M)
STEERING	DUAL
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	N/A
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	8FT 2IN (2.49M)
BRIDGE CLEARANCE	<p>WILL NOT PASS UNDER WROXHAM BRIDGE, POTTER HEIGHAM BRIDGE OR BECCLES OLD BRIDGE</p> <p>Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.</p>
BERTHS	4 DOUBLES IN <u>4 CABINS</u>
BED SIZES	SEE BOAT LAYOUT
BATHROOM	1 BATHROOM & 2 ENSUITE WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - SWITCH ON BACK WALL MIDDLE SHOWER - SIDE OF SINK BACK SHOWER - SIDE OF SINK
COOKING FACILITIES	ELECTRIC 2 RING, LARGE OVEN & GRILL & MICROWAVE
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 3000w GEN
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	7 -
WIFI	YES
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	8
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • OUTSIDE SEATING AREA • HAIR DRYER • LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE


WIFI

This boat is connected to our new unlimited WiFi. To connect to your onboard WiFi, you will need to go into your device's WiFi settings and select: "BarnesBrinkcraft WiFi"

You should then be taken to a login page that asks you to accept the Terms and Conditions

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

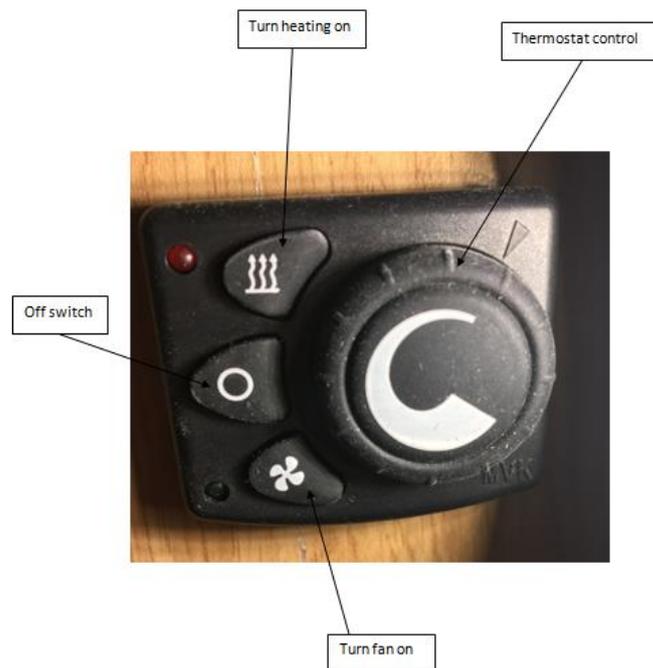

HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON AS SHOWN ON OPPOSITE PAGE.

ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.

IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.

SET THE TEMPERATURE TO MAXIMUM AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY, START ENGINE TO CHARGE BATTERIES.

IF THIS DOES NOT WORK, PLEASE CALL THE ON CALL ENGINEER ON 01603 782625

WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.

Throttle Controls

This boat has upper and lower steering positions.

This is the lower throttle control.

On the control are some lights and buttons. You need to hold the buttons for at least one second to turn on (or until the light comes on).



The green “Neutral” light indicates that the throttle control is in the neutral gear position. There is also a notch near the base of the lever to indicate the neutral position for the gear lever.

To drive the boat, push the gear lever forwards to engage forward gear. The further forwards you push it, the faster the boat will go. Pull the lever backwards past neutral to reverse or slow down. Again, the further you pull the throttle back, the faster the boat will go in reverse.

There is also a “Warm Up” button which when activated, will disengage the gear control, and allow the engine to be revved up without going into drive. This is indicated by a flashing light. While the boat

is in this mode it is not in gear, so will not move. To drive the boat after using this mode, press the warm up button again to engage the gear function, and push the gear lever forwards as above.

How to switch between helm positions

The “Command” button is used to change from one steering position to the other. The red or blue command light indicates when this control is in command of the boat and ready to use. If you wish to take command (drive the boat) from the other steering position, make sure both controls are in neutral, then press the command button on the control you wish to use. The command light will come on.

We recommend only changing controls/steering positions while the boat is moored. If you have just changed controls while moored, gently check forward and reverse gear at the control you wish to use are working correctly, before untying the boat and leaving the mooring.

Lullaby

Fri/Mon (1) or Sat/Tues (2+3) start - 4 doubles in 4 cabins - 3 toilets/showers in 1 bathroom & 2 ensuites

