



**BarnesBrinkcraft**  
Serving the Norfolk Broads since 1967

**WELCOME TO  
MELODY 2**

<b>THE BOATYARDS NAME IS</b>	<b>BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD</b>
<b>BOATYARDS TELEPHONE NUMBER</b>	<b>01603 782625 – 8am to 5pm</b>
<b>AFTER HOURS TELEPHONE NUMBER</b>	<b>01603 782625</b>
<b>THIS BOAT IS NAMED</b>	<b>MELODY 2 (MID-RANGE CLASS)</b>

TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	44FT (13.41M)
WIDTH	12FT (3.66M)
STEERING	DUAL
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	N/A
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	8FT 2IN (2.49M)
BRIDGE CLEARANCE	<p>WILL NOT PASS UNDER WROXHAM BRIDGE  POTTER HEIGHAM BRIDGE  BECCLES OLD BRIDGE</p> <p><b>Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.</b></p>
BERTHS	3 DOUBLES & 1 SINGLE IN 3 CABINS
BED SIZES	SEE BOAT LAYOUT
BATHROOM	3 ENSUITE BATHROOMS WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - BUTTON ON BACK WALL MIDDLE SHOWER - SIDE OF SINK BACK SHOWER - SIDE OF SINK
COOKING FACILITIES	INDUCTION 2 RING, LARGE OVEN & GRILL MICROWAVE
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 8000w
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	7 1 REAR CABIN, 1 MID CABIN, 2 GALLEY, 1 SALOON 2 FOREPEAK
WIFI	YES
BOAT REGISTRATION	230H
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	7
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> <li>• ONE SPACIOUS CABIN THAT SLEEPS 3</li> <li>• LARGE SOCIABLE SALOON</li> <li>• OUTSIDE SEATING AREA</li> <li>• HAIR DRYER</li> <li>• <b>LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE</b></li> </ul>

# HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL



## HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON.

ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.

IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.

SET THE TEMPERATURE TO MAXIMUM AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY, START ENGINE TO CHARGE BATTERIES.

IF THIS DOES NOT WORK, PLEASE CALL THE ON CALL ENGINEER. 01603 782625.

WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.


### WIFI

This boat is connected to our new unlimited WiFi. To connect to your onboard WiFi, you will need to go into your device's WiFi settings and select: "BarnesBrinkcraft WiFi"

You should then be taken to a login page that asks you to accept the Terms and Conditions

## Melody

Fri/Mon (1) or Sat/Tues (2+3) start - 3 doubles & 1 single in 3 cabins - 3 toilets/showers in 3 ensuites

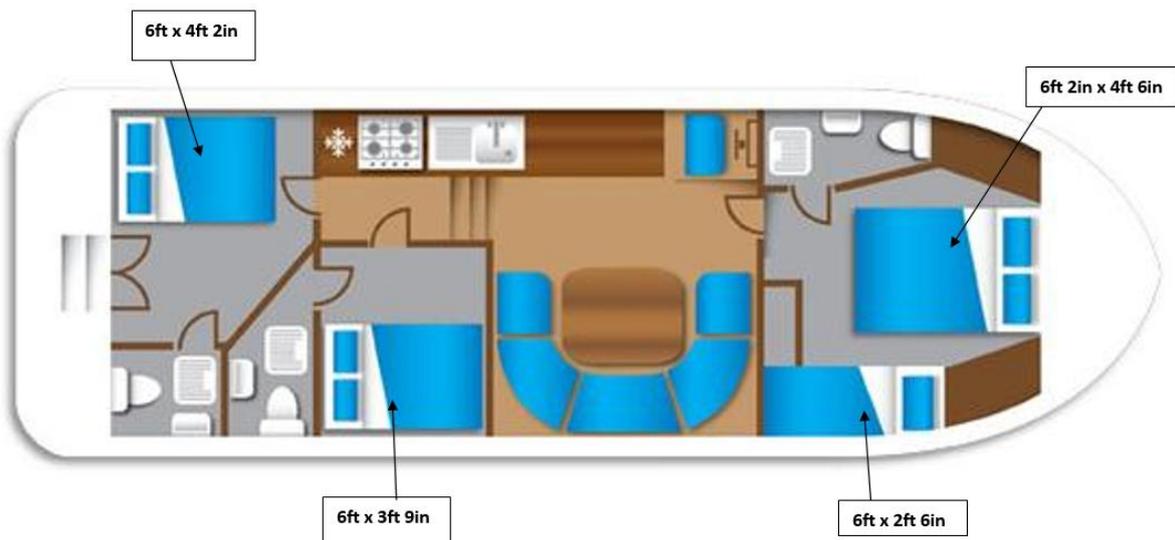


# Throttle Controls

This boat has upper and lower steering positions. Your boat will have the throttle controls pictured below in both positions.

The throttle controls the speed of the boat. The further forward you push it the faster it will go and the further back you pull it the faster it will go in reverse.

## How to start your boat:

1. check your throttle is in neutral. If your boat has dual control check both throttles are in neutral. You can check this by making sure both the small triangle and notch on the inside on the throttle are lined up.
2. Put keys in ignition and turn to start the boat, both engine lights will come on. (The top two lights)
3. Press 'Command' on the controls you will be using (either upper or lower helm). You'll need to push the button for 1 second, and you will see the blue light come on above the command button. If the lights don't come on it means the boat is probably not in neutral, check and try again.
4. The 'Warm/Sync' light will now be flashing. This means the gear control is disengaged.  
If you push the throttle forward it will rev the engine without moving.
5. Push the 'Warm/Sync' button (for 1 second) and the gear will be engaged. You can now drive the boat with the throttle.
6. Before untying and leaving the moorings gentle test the throttle is working in forward and reverse by gently pushing the throttle slightly in both directions. Once you're confident the boat is responding to the throttle you can untie from the moorings and head off.

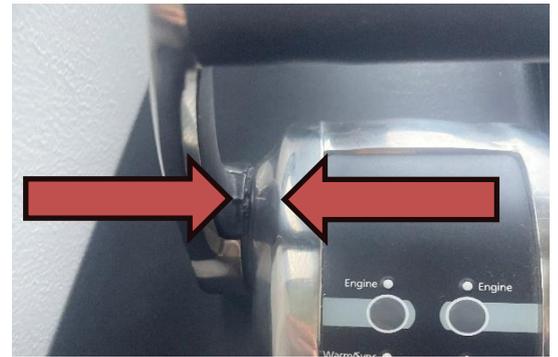

## Changing driving position:

1. When changing from one control to another you need to make sure BOTH throttles are in neutral (step 1 above)
2. Move to your desired driving position.

3. Hold the command button on the throttle for 1 second to engage, the light will come on when the command is engaged.
4. You can now control the boat from this driving position.

We recommend only changing controls/steering positions while the boat is moored. If you have just changed controls while moored, gently check forward and reverse gear at the control you wish to use are working correctly, before untying the boat and leaving the mooring.

Again, if you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).