



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

**WELCOME TO
QUARTET 2**


THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	QUARTET 2

BOAT INFORMATION

TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	35FT (10.67M)
WIDTH	12FT (3.66M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS UP	8FT (2.43M)
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS LOWERED	7FT (2.14M)
BRIDGE CLEARANCE	<p>WILL NOT PASS UNDER POTTER HEIGHAM BRIDGE</p> <p>Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully</p>
BERTHS	3 DOUBLES IN <u>2 CABINS & SALOON</u>
BED SIZES	SEE BOAT LAYOUT
BATHROOM	1 BATHROOM & 1 ENSUITE WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - BUTTON ABOVE TOWEL RAIL BACK SHOWER - BUTTON IN CUBICLE
COOKING FACILITIES	ELECTRIC 2 RING PLUS MICROWAVE COMBI OVEN (Samsung)
FRIDGE/FREEZER	SMALL FRIDGE WITH ICEBOX & UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 5000w
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	8 (4 SOCKETS AFT, 2 GALLEY, 2 FOREPEAK)
WIFI	YES
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	6 (4+2)
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • SLIDING COVER OVER RAISED SEATING AREA IN THE SALOON • IDEAL FOR TWO COUPLES • HAIR DRYER • LICENSED FOR 9 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

Quartet

Fri/Mon (1+3) or Sat/Tues (2+4) start - 3 doubles in 2 cabins & saloon - 2 toilets/showers in 1 bathroom & 1 ensuite

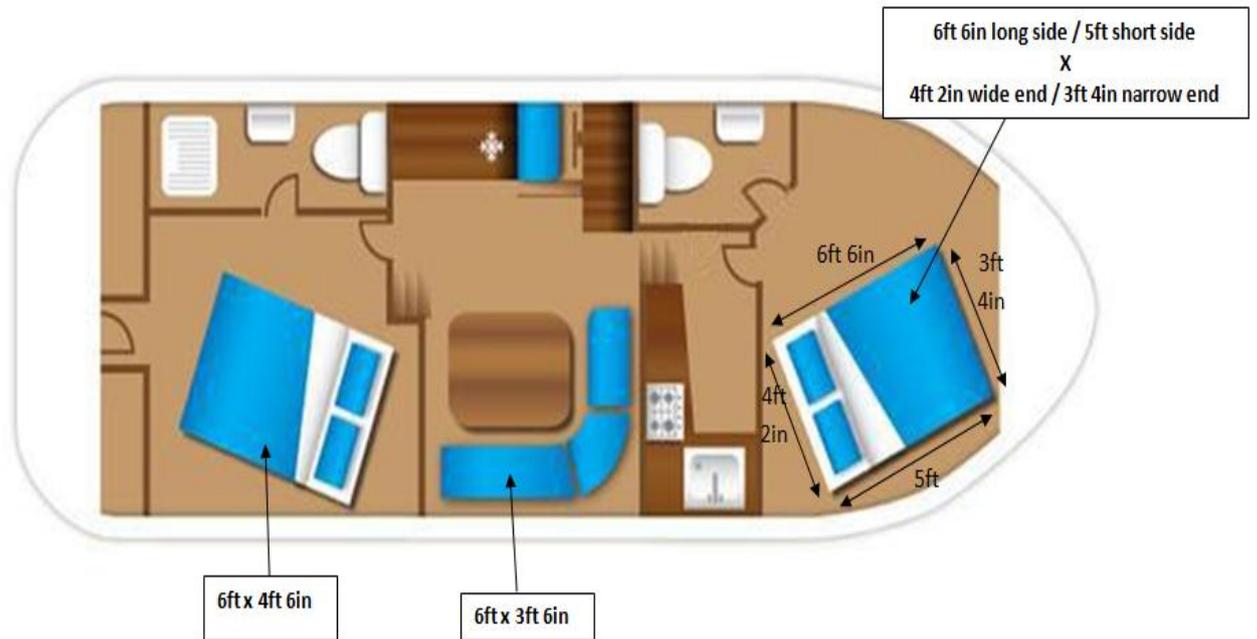

WIFI CONNECTION

This boat is connected to our new unlimited WiFi. To connect to your onboard WiFi, you will need to go into your device's WiFi settings and select: "BarnesBrinkcraft WiFi"

You should then be taken to a login page that asks you to accept the Terms and Conditions

THROTTLE CONTROL FOR YOUR BOAT

(Quartet 2)

The throttle control for your boat is pictured below.

The boat is out of gear (in neutral) when the lever is in the reclined 10 o'clock position (in line with top of dashboard - see below).



Push the lever up and forwards to engage forward gear. The further forwards you push it, the faster the boat will go.

Pull the lever backwards past neutral to reverse or slow down. Again, the further you pull the throttle back, the faster the boat will go in reverse.

To disengage the gear junction while the boat is out of gear or in the neutral position, pull the base of the throttle lever out. You can then move the lever

forwards to rev the engine for cold starting, battery charging or heating the water. Push the throttle lever back in to re-engage the gear function, to drive the boat.

Always keep your speed below the speed limit; slowing down a little can make a big saving on fuel use. As always, if you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON.

ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.

IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.

SET THE TEMPERATURE TO MAXIMUM AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY START ENGINE TO CHARGE BATTERIES.

IF THIS DOES NOT WORK PLEASE CALL THE ON CALL ENGINEER. 01603 782625

WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.

