



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

**WELCOME TO
REXMORE**

THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	REXMORE (MID-RANGE CLASS)


BOAT INFORMATION

TURNAROUND DAYS	FRI/MON
LENGTH OF BOAT	40FT (12.19M)
WIDTH	12FT 6IN (3.81M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS UP	8FT 6IN (2.59M)
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS LOWERED	7FT (2.14M)
BRIDGE CLEARANCE	<p style="text-align: center;">WILL NOT PASS UNDER POTTER HEIGHAM BRIDGE WILL PASS UNDER WROXHAM BRIDGE <u>AT SUITABLE TIDES</u></p> <p style="color: red; text-align: center;">Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.</p>
BERTHS	<p style="text-align: center;">3 DOUBLES & 2 SINGLES OR 2 DOUBLES & 4 SINGLES IN <u>3 CABINS</u> & SALOON</p>
BED SIZES	SEE BOAT LAYOUT
HOW TO MAKE UP BED IN SALOON	BED FLIPS DOWN
BATHROOM	<p style="text-align: center;">2 BATHROOMS WITH TOILET/SHOWER</p>
HOW TO DRAIN SHOWER	SWITCH NEXT TO TOILET FLUSH
COOKING FACILITIES	GAS 4 RING HOB, SEPARATE OVEN AND GRILL MICROWAVE
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	NO
ELECTRIC ANCHOR WINCH?	NO
POWER	<p style="text-align: center;">240v POWER</p> <p style="text-align: center;">SHORE INVERTER 1600w</p>
HEATER	<p style="text-align: center;">HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC</p> <p style="text-align: center;">INSTRUCTIONS INCLUDED IN YOUR MANUAL</p>
NUMBER OF POWER SOCKETS	1
WIFI	NO
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	<p style="text-align: center;">8 (6+2)</p>
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • ELECTRIC CANOPY • GOOD FOR FAMILIES WITH FLEXIBLE ACCOMMODATION • LARGE OPEN SALOON AREA • HAIR DRYER • LICENSED FOR 9 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

Rexmore

Fri/Mon start - 3 doubles & 2 singles or 2 doubles & 4 singles in 3 cabins & saloon - 2 toilets/showers in 2 bathrooms

✂

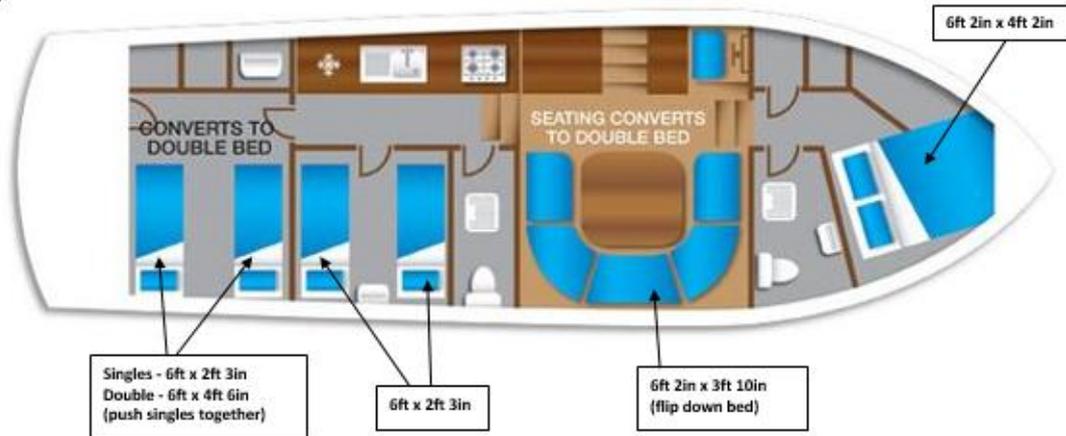

HEATING CONTROL

YOUR BOAT WILL BE EQUIPPED WITH THIS HEATING CONTROL.

0 - IS OFF

TURN THUMB DIAL CLOCKWISE TO INCREASE HEATING.



THROTTLE CONTROL FOR YOUR BOAT (Rexmore)

The throttle control for your boat is pictured below.

The boat is out of gear (neutral) when the lever is in the reclined/10 o'clock position.

Push the lever forwards to engage forward gear. The further forwards you push it, the faster the boat will go.



Pull the lever backwards past neutral to reverse or slow down. Again, the further you pull the throttle back, the faster the boat will go in reverse.

To disengage the gear function while the boat is out of gear or in the neutral position, pull the neutral lock button out. You can then move the lever forwards to rev the engine for cold starting, battery charging or heating the water. Push the button back in to re-engage the gear function.

neutral lock button

Always keep your speed below the speed limit, slowing down a little can make a big saving on fuel use. As always, if you are not sure how to operate the boat or have any other concerns, please call our team.

Gas System Operation

The cooker on this boat burns Liquefied Petroleum Gas (LPG). The gas comes from one or two cylinders located in a locker outside the boat. The gas has taps to isolate the gas on the top of the bottles, at an isolator tap in the galley and on the cooker.

1. To light the cooker, check that the connected bottle in the gas locker is switched on. All gas valves turn anti-clockwise for on.
2. The cooker isolator tap in the galley also needs to be on. Check the position against the label next to it.
3. To light the cooker first press the ignition button **OR** hold a lit match next to the selected burner.
4. Turn the tap anti-clockwise and hold it in to light the ring. Hold the tap in for a few more seconds and release it.
5. If the ring goes out when you release the tap you may need to repeat 3 & 4 and hold it in a little longer.
6. Make sure the cooker is switched off and the flame is out when you have finished.
7. For added safety switch of the gas cylinders in the locker.

What to do if you smell gas:

- 1. Switch off the gas cylinders in the gas locker.**
- 2. Contact the boat yard on 01603 782625 and speak to an on call engineer.**
- 3. Open doors and windows to ventilate the boat if it is safe to do so.**

Do's and Don'ts

Do make sure you are happy with the operation of the gas system during your trial run.

Do make sure the cooker is correctly turn off and isolated when not in use.

Do open a window or door when the cooker is in use to provide extra ventilation.

Do contact the boat yard if you have any concerns about the gas system and or ventilation.

Do not use any other fuel burning appliances that are not supplied with the boat. For example, do not use gas cooking appliances, generators or barbeques onboard, if in doubt contact the boat yard for further advice.

Do not leave the cooker on unattended.

Do not use the cooker when underway. The movement of the boat could cause hot pans to spill or be knocked over.

Do not block any air vents even if there are drafts.

Do not Use the gas cooker to heat the boat.

