



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

**WELCOME TO
SONNET 1**


THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	SONNET 1 (MID CLASS)

BOAT INFORMATION

TURNAROUND DAYS	FRI/MON
LENGTH OF BOAT	31FT (9.45M)
WIDTH	12FT (3.66M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	6FT 7IN (2.01M)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	<p style="text-align: center;">WILL NOT PASS UNDER POTTER HEIGHAM BRIDGE OR BECCLES OLD BRIDGE. WILL PASS UNER ALL OTHER BRIDGES <u>AT SUITABLE TIDES</u> Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully</p>
BERTHS	<p style="text-align: center;">2 DOUBLES IN <u>1 CABIN & SALOON</u></p>
BED SIZES	SEE BOAT LAYOUT
BATHROOM	SEPERATE SHOWER & SEPARATE TOILET
HOW TO DRAIN SHOWER	SWITCH ON THE WALL
COOKING FACILITIES	ELECTRIC 2 RING & MICROWAVE COMBI
FRIDGE/FREEZER	UNDER CABINET FRIDGE WITH ICE BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	<p style="text-align: center;">240v POWER SHORE INVERTER 5000w</p>
HEATER	<p style="text-align: center;">HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL</p>
NUMBER OF POWER SOCKETS	6 (4 IN SALOON, 2 IN AFT CABIN)
WIFI	YES
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	<p style="text-align: center;">4 (2+2)</p>
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • SINGLE LEVEL INSIDE & WIDE SIDE DECK FOR EASY ACCESS • FORWARD STEERING • SPLIT SLIDING CANOPY OVER AIRY SALOON • "WALKAROUND" DOUBLE BERTH • HAIR DRYER • LICENSED FOR 7 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

Sonnet

- Fri/Mon (1) or Sat/Tues (2+3) start - 2 doubles in 1 cabin & saloon - separate shower & toilet -

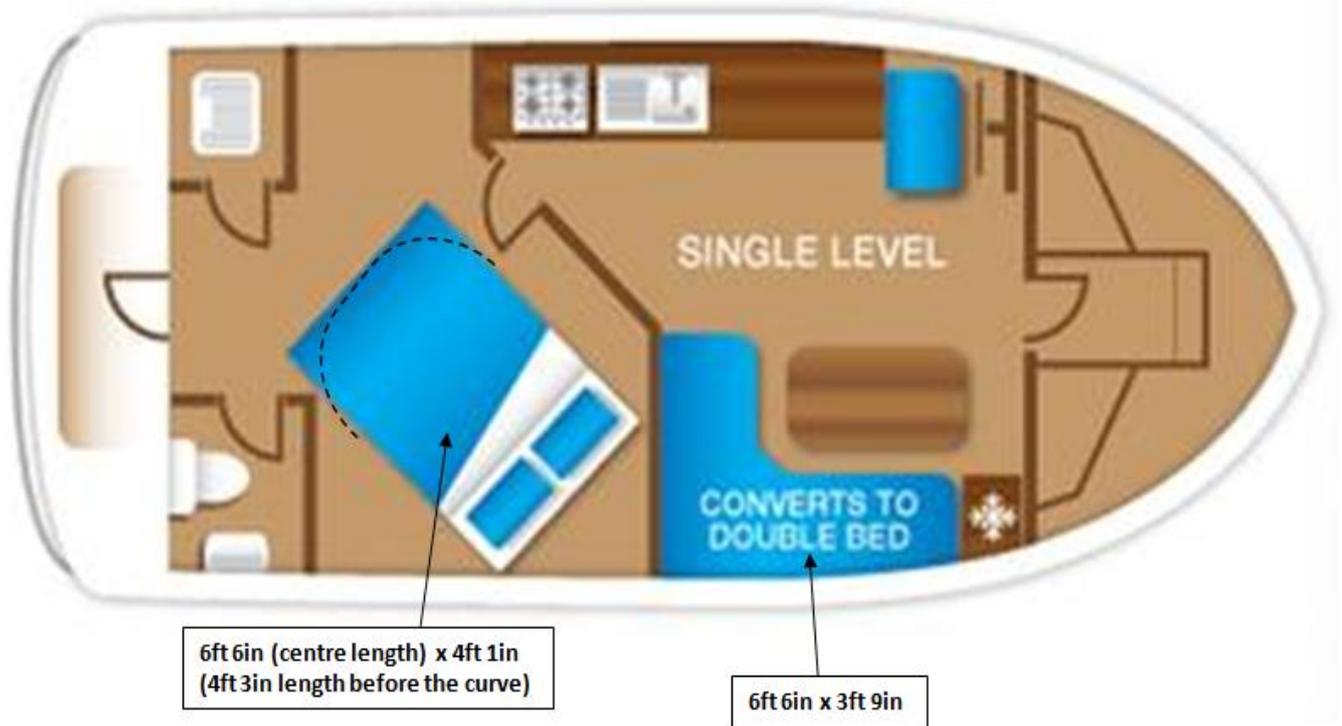

WIFI CONNECTION

To connect to your onboard Wifi, you will need to go into your Wifi settings and select "Brinkcraft-guest".

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL



HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON AS SHOWN ABOVE.

ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.

IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.

SET THE TEMPERATURE TO MAXIMUM, AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY START ENGINE TO CHARGE BATTERIES.

IF THIS DOES NOT WORK PLEASE CALL THE ON CALL ENGINEER ON 01603 782625

WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.

THROTTLE CONTROL FOR YOUR BOAT (Sonnet 1)

The throttle control for your boat is pictured below.

The boat is out of gear (in neutral) when the lever is in the flat of 9 o'clock position (see below).

Push the lever up and forwards to engage forward gear. The further forwards you push it, the faster the boat will go.



Pull the lever backwards past neutral to reverse or slow down. Again, the further you pull the throttle back, the faster the boat will go in reverse.

To disengage the gear function while the boat is out of gear or in the neutral position, pull the base of the throttle lever out. You can then move the lever forwards to rev the engine for cold starting, battery charging or heating the water. Push the

throttle lever back in to re-engage the gear function, to drive the boat.

Always keep your speed below the speed limit; slowing down a little can make a big saving on fuel use. As always, if you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).