



**BarnesBrinkcraft**  
Serving the Norfolk Broads since 1967

WELCOME TO  
SYMPHONY 3


|                                     |  |
|-------------------------------------|--|
| <b>THE BOATYARDS NAME IS</b>        | <b>BARNES BRINKCRAFT<br/>RIVERSIDE ROAD<br/>WROXHAM<br/>NR12 8UD</b> |
| <b>BOATYARDS TELEPHONE NUMBER</b>   | <b>01603 782625 – 8am to 5pm</b>                                     |
| <b>AFTER HOURS TELEPHONE NUMBER</b> | <b>01603 782625</b>  |
| <b>THIS BOAT IS NAMED</b>           | <b>SYMPHONY 3<br/>("NO FRILLS" CLASS)</b>                            |

# BOAT INFORMATION

|   |  |
|---|--|
| TURNAROUND DAYS   | FRI/MON  |
| LENGTH OF BOAT  | 42FT (12.72M)  |
| WIDTH   | 12FT 3IN (3.73M)   |
| STEERING  | SINGLE   |
| BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS UP      | 8FT 6IN (2.59M)  |
| BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS LOWERED | 7FT 6IN (2.29M)  |
| BRIDGE CLEARANCE  | <p style="text-align: center;">WILL NOT PASS UNDER WROXHAM BRIDGE<br/>OR POTTER HEIGHAM BRIDGE<br/>BECCLES OLD BRIDGE</p> <p style="text-align: center; color: red;">Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.</p>  |
| BERTHS  | <p style="text-align: center;">4 SINGLES &amp; 3 DOUBLES<br/>IN<br/>5 CABINS &amp; SALOON<br/>(NOTE: SINGLE CABIN VERY SMALL &amp;<br/>PARTIALLY COVERED)</p>  |
| BED SIZES   | SEE BOAT LAYOUT  |
| BATHROOM  | 2 BATHROOMS<br>WITH<br>TOILET/SHOWER   |
| HOW TO DRAIN SHOWER                                     | SWITCH NEXT TO TOILET  |
| COOKING FACILITIES                                      | GAS 4 RING, MEDIUM OVEN & SEPARATE GRILL<br><u>NO MICROWAVE</u>  |
| FRIDGE/FREEZER  | UNDER COUNTER FRIDGE WITH FREEZER BOX  |
| BOW THRUSTER?   | NO   |
| ELECTRIC ANCHOR WINCH?                                  | NO   |
| POWER   | 240v POWER<br><br>SHORE INVERTER 1600w SOLAR   |
| HEATER  | HEATER RUNS OFF THE DIESEL<br>FANS RUN OFF THE ELECTRIC<br><br>INSTRUCTIONS INCLUDED IN YOUR MANUAL  |
| NUMBER OF POWER SOCKETS                                 | 2 IN SALOON  |
| WIFI  | NO   |
| THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS           | 10<br>(8+2)  |
| ADDITIONAL INFORMATION                                  | <ul style="list-style-type: none"> <li>• THIS OLDER STYLE CRUISER SUITS LARGER GROUPS/FAMILIES</li> <li>• HAIR DRYER</li> <li>• SLIDING CANOPY OVER LARGE AND AIRY SALOON</li> <li>• SLIGHTLY RAISED STEERING POSITION FOR GOOD VISIBILITY</li> <li>• DINETTE AT THE BACK CONVERTS TO A DOUBLE</li> <li>• <span style="color: red;">LICENSED FOR 11 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE</span></li> </ul> |


# Symphony

Fri/Mon start - 3 doubles & 4 singles in 5 cabins & saloon - 2 toilets/showers in 2 bathrooms

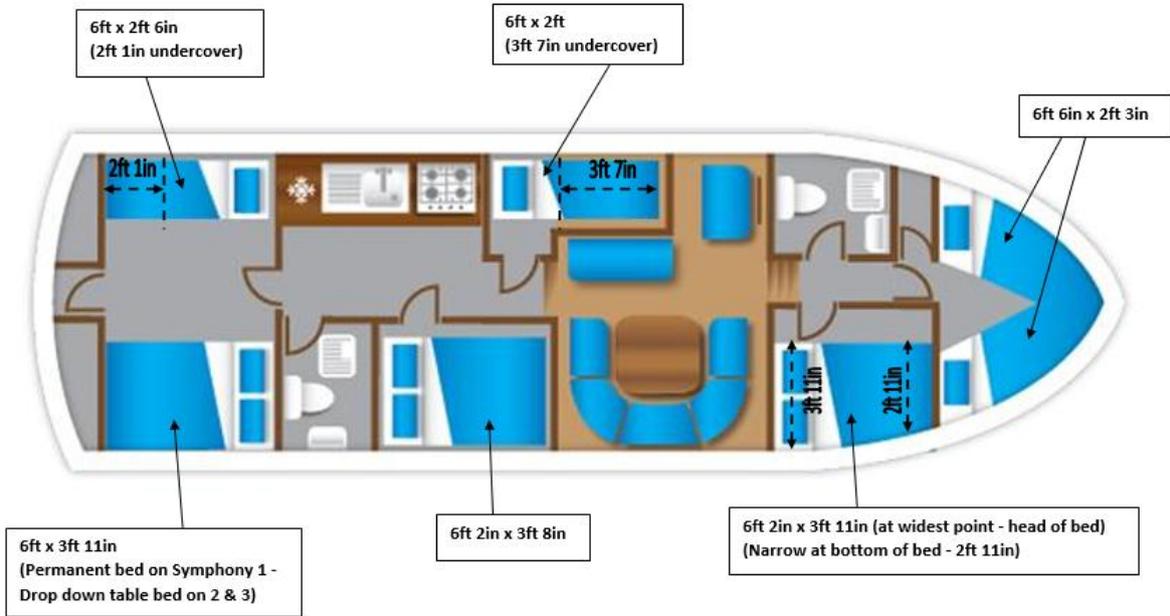

# HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

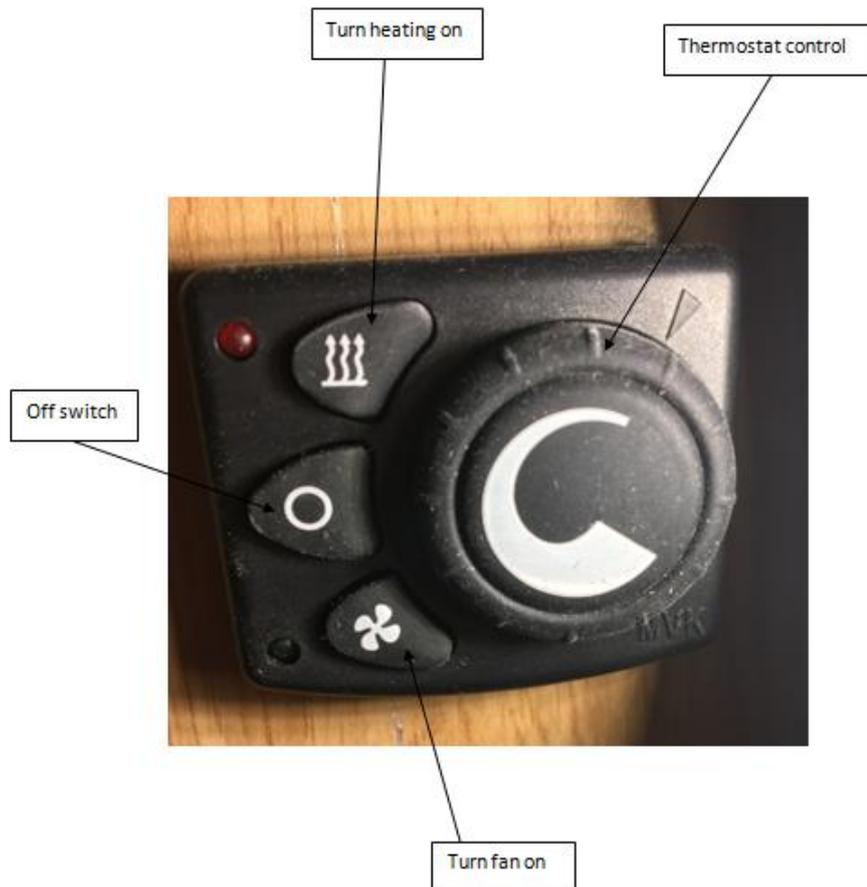

## HOW TO WORK YOUR HEATING SYSTEM

**SWITCH HEATING ON AS SHOWN ON OPPOSITE PAGE.**

**ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.**

**IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.**

**SET THE TEMPERATURE TO MAXIMUM AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY START ENGINE TO CHARGE BATTERIES.**

**IF THIS DOES NOT WORK, PLEASE CALL THE ON CALL ENGINEER. 01603 782625. WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.**

# THROTTLE CONTROL FOR YOUR BOAT

## (Symphony 3)

**The throttle control for your boat is pictured below.**

The boat is out of gear (neutral) when the lever is in the upright position (see below).

Push the lever forwards to engage forward gear. The further forwards you push it, the faster the boat will go.

Pull the lever backwards past neutral to reverse or slow down. Again, the further you pull the throttle back, the faster the boat will go in reverse.

To disengage the gear function while the boat is out of gear or in the neutral position, pull the base of the throttle lever out. You can then move the lever forwards to rev the engine for cold starting, battery charging or heating the water. Push the throttle lever back in to re-engage the gear function.



Always keep your speed below the speed limit; slowing down a little can make a big saving on fuel use. As always, if you are not sure how to operate the boat or have any other concerns, please call our team.

## Gas System Operation

The cooker on this boat burns Liquefied Petroleum Gas (LPG). The gas comes from one or two cylinders located in a locker outside the boat. The gas has taps to isolate the gas on the top of the bottles, at an isolator tap in the galley and on the cooker.

1. To light the cooker, check that the connected bottle in the gas locker is switched on. All gas valves turn anti-clockwise for on.
2. The cooker isolator tap in the galley also needs to be on. Check the position against the label next to it.
3. To light the cooker first press the ignition button OR hold a lit match next to the selected burner.
4. Turn the tap anti-clockwise and hold it in to light the ring. Hold the tap in for a few more seconds and release it.
5. If the ring goes out when you release the tap you may need to repeat 3 & 4 and hold it in a little longer.
6. Make sure the cooker is switched off and the flame is out when you have finished.
7. For added safety switch of the gas cylinders in the locker.

### What to do if you smell gas:

1. Switch of the gas cylinders in the gas locker.
2. Contact the boat yard on 01603 782625 and speak to an on call engineer.
3. Open doors and windows to ventilate the boat if it is safe to do so.

### Do's and Don'ts

Do make sure you are happy with the operation of the gas system during your trial run.

Do make sure the cooker is correctly turn off and isolated when not in use.

Do open a window or door when the cooker is in use to provide extra ventilation.

Do contact the boat yard if you have any concerns about the gas system and or ventilation.

**Do not** use any other fuel burning appliances that are not supplied with the boat. For example do not use gas cooking appliances, generators or barbeques onboard, if in doubt contact the boat yard for further advice.

**Do not** leave the cooker on unattended.

Do not use the cooker when underway. The movement of the boat could cause hot pans to spill or be knocked over.

**Do not** block any air vents even if there are drafts.

**Do not** Use the gas cooker to heat the boat.

