



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

**WELCOME TO
ULTIMA 2**


THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	ULTIMA 2 (NO-FRILLS CLASS)

BOAT INFORMATION

TURNAROUND DAYS	FRI/MON
LENGTH OF BOAT	46FT (14.02M)
WIDTH	12FT (3.66M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	6FT 10IN (2.09M)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	<p style="text-align: center;">PASSES UNDER ALL BRIDGES AT SUITABLE TIDES</p> <p style="color: red;">Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.</p>
BERTHS	<p style="text-align: center;">3 DOBULES & 5 SINGLES IN 4 CABINS & SALOON</p>
BED SIZES	SEE BOAT LAYOUT
BATHROOM	<p style="text-align: center;">3 BATHROOMS WITH TOILET/SHOWER</p>
HOW TO DRAIN SHOWER	<p style="text-align: center;">FRONT SHOWER - BUTTON BELOW SINK</p> <p style="text-align: center;">MIDDLE SHOWER - ON THE BACK WALL</p>
COOKING FACILITIES	<p style="text-align: center;">GAS 4 RING HOB, MEDIUM OVEN & GRILL MICROWAVE</p>
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	NO
ELECTRIC ANCHOR WINCH?	NO
POWER	<p style="text-align: center;">LIMITED 240v POWER</p> <p style="text-align: center;">SHORE INVERTER 1600w SOLAR</p>
HEATER	<p style="text-align: center;">HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC</p> <p style="text-align: center;">INSTRUCTIONS INCLUDED IN YOUR MANUAL</p>
NUMBER OF POWER SOCKETS	3 (2 in front near helm seat, 1 in back cabin)
WIFI	NO
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	11 (8+3)
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • HAIR DRYER • SINGLE LEVEL INTERIOR WITH EASY ACCESS FROM THE FRONT & REAR FOOTWELLS • LARGE PRACTICAL SALOON WITH SPLIT SLIDING CANOPY MAKES FOR A GOOD SOCIABLE SPACE • IDEA FOR FAMILIES OR GROUPS OF FRIENDS SHARING • UNDERSIZED SINGLE BERTHS MAY BE UNSUITABLE FOR ADULTS • REAR DOUBLE DOORS • LICENSED FOR 12 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE


Ultima 2

Fri/Mon start - 5 singles & 3 doubles in 4 cabins & saloon - 3 toilets/showers in 3 bathrooms

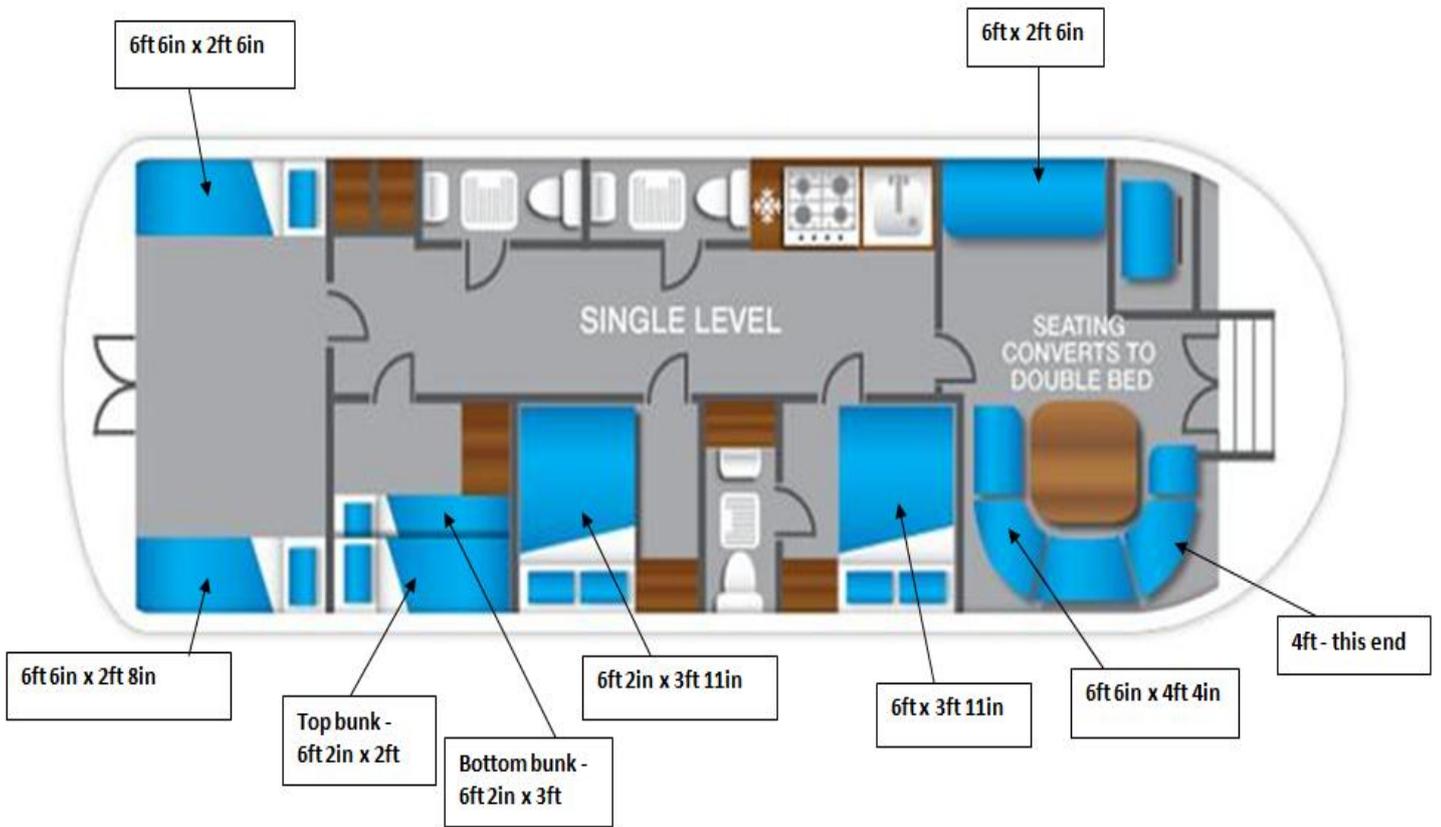

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

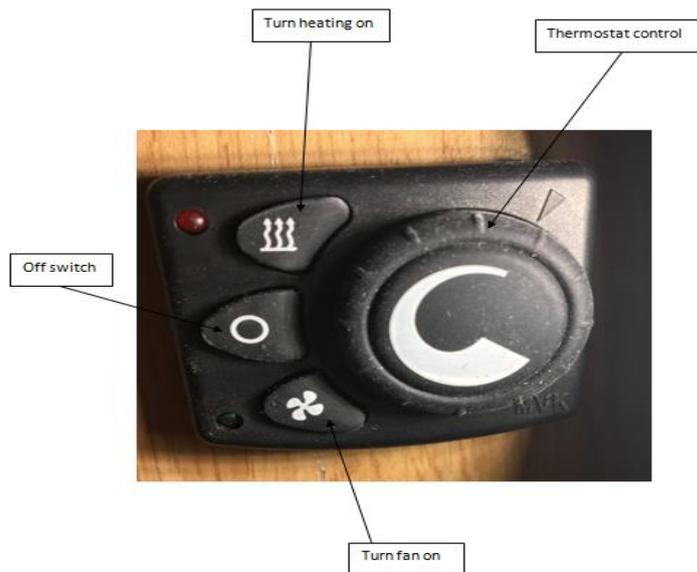

HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON AS SHOWN ABOVE.

ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.

IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.

SET THE TEMPERATURE TO MAXIMUM, AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY START ENGINE TO CHARGE BATTERIES.

IF THIS DOES NOT WORK PLEASE CALL THE ON CALL ENGINEER ON 01603 782625

WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.

Gas System Operation

The cooker on this boat burns Liquefied Petroleum Gas (LPG). The gas comes from one or two cylinders located in a locker outside the boat. The gas has taps to isolate the gas on the top of the bottles, at an isolator tap in the galley and on the cooker.

1. To light the cooker, check that the connected bottle in the gas locker is switched on. All gas valves turn anti-clockwise for on.
2. The cooker isolator tap in the galley also needs to be on. Check the position against the label next to it.
3. To light the cooker first press the ignition button **OR** hold a lit match next to the selected burner.
4. Turn the tap anti-clockwise and hold it in to light the ring. Hold the tap in for a few more seconds and release it.
5. If the ring goes out when you release the tap you may need to repeat 3 & 4 and hold it in a little longer.
6. Make sure the cooker is switched off and the flame is out when you have finished.
7. For added safety switch of the gas cylinders in the locker.

What to do if you smell gas:

- 1. Switch of the gas cylinders in the gas locker.**
- 2. Contact the boat yard on 01603 782625 and speak to an on call engineer.**
- 3. Open doors and windows to ventilate the boat if it is safe to do so.**

Do's and Don'ts

Do make sure you are happy with the operation of the gas system during your trial run.

Do make sure the cooker is correctly turn off and isolated when not in use.

Do open a window or door when the cooker is in use to provide extra ventilation.

Do contact the boat yard if you have any concerns about the gas system and or ventilation.

Do not use any other fuel burning appliances that are not supplied with the boat. For example do not use gas cooking appliances, generators or barbeques onboard, if in doubt contact the boat yard for further advice.

Do not leave the cooker on unattended.

Do not use the cooker when underway. The movement of the boat could cause hot pans to spill or be knocked over.

Do not block any air vents even if there are drafts.

Do not Use the gas cooker to heat the boat.

THROTTLE CONTROL FOR YOUR BOAT (Ultima 2)

The throttle control for your boat is pictured below.

The boat is out of gear (neutral) when the lever is in the flat or 9 o'clock position as below.

Push the lever up and forwards to engage forward gear. The further forwards you push it, the faster the boat will go.

Pull the lever back down past neutral to reverse or slow down. Again, the further you pull the throttle back, the faster the boat will go in reverse.



To disengage the gear function while the boat is out of gear or in the neutral position, push the neutral lock button. You can then move the lever forwards to rev the engine for cold starting, battery charging or heating the

neutral lock button

water. The neutral lock button will pop back out to re-engage the gear function when you return the throttle lever to the neutral position.

Always keep your speed below the speed limit, slowing down a little can make a big saving on fuel use. As always, if you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).