



**BarnesBrinkcraft**  
Serving the Norfolk Broads since 1967

**WELCOME TO  
BRINKS CHORUS**

<b>THE BOATYARDS NAME IS</b>	<b>BARNES BRINKCRAFT in WROXHAM</b>
<b>BOATYARDS TELEPHONE NUMBER</b>	<b>01603 782625 – 8am to 5pm</b>
<b>AFTER HOURS TELEPHONE NUMBER</b>	<b>01603 782625</b>
<b>THIS BOAT IS NAMED</b>	<b>BRINKS CHORUS</b> <b>(ELITE CLASS)</b>

# BOAT INFORMATION

TURNAROUND DAYS	SAT/TUE
LENGTH OF BOAT	36ft (10m)
WIDTH	12ft (3.66m)
STEERING	SINGLE FORWARD STEERING
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	6ft 8in (2.05m)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	PASSES UNDER ALL BRIDGES AT SUITABLE TIDES BUT WILL RARELY GO UNDER POTTER HEIGHAM OR BECCLES OLD BRIDGE <b>Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully</b>
BERTHS	2 DOUBLES IN 1 CABIN & SALOON
BED SIZES	SEE BOAT LAYOUT
HOW TO MAKE UP BED IN SALOON	TAKE TABLE AWAY PULL OUT PANEL UNDERNEATH USE SOFA CUSHIONS TO MAKE UP BED
BATHROOM	1 BATHROOM WITH TOILET AND FULL SIZE WALK-IN SHOWER
HOW TO DRAIN SHOWER	SWITCH ON PANEL BESIDE TOILET
COOKING FACILITIES	ELECTRIC INDUCTION HOB COMBINATION MICROWAVE AND GRILL DOUBLE SINKS
FRIDGE/FREEZER	FULL SIZE FRIDGE
BOW THRUSTER?	YES – BOW AND STERN
ELECTRIC ANCHOR WINCH?	YES
POWER	LIMITED 240v POWER 3 Pin sockets SHORE INVERTER 2000w SOLAR
HEATER	Warm air heating INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	One in each cabin
WIFI	YES
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	4 (2+2)
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> <li>• SINGLE LEVEL INTERIOR</li> <li>• SPLIT SLIDING CANOPY</li> <li>• FORWARD WELL AREA TO SIT AND ENJOY THE VIEWS</li> <li>• SMART TVS</li> <li>• QUIET HYDRUALIC DRIVE ENGINE</li> <li>• ‘WALK AROUND’ DOUBLE BERTH</li> <li>• HAIR DRYER</li> <li>• BLUETOOTH MUSIC SYSTEM</li> <li>• WIRELESS PHONE CHARGER</li> <li>• TOUCHSCREEN DASH</li> <li>• <b>LICENSED FOR 6 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIR</b></li> </ul>


# Throttle Controls

**This boat has lower steering position. Your boat will have the throttle controls pictured below.**

The throttle controls the speed of the boat. The further forward you push it the faster it will go and the further back you pull it the faster it will go in reverse.

## How to start your boat:

1. check your throttle is in neutral. If your boat has dual control check both throttles are in neutral. You can check this by making sure both the small triangle and notch on the inside on the throttle are lined up.
2. Put keys in ignition and turn.
3. If there is a start button next the ignition, push it to start the boat and both engine lights will come on. (The top two lights) If they don't come on it mean the boat is probably not in neutral. Check this at try again.
4. Press 'Command' on the controls you will be using (either upper or lower helm). You'll need to push the button for 1 second, and you will see the blue light come on above the command button.
5. The 'Warm/Sync' light will now be flashing. This means the gear control is disengaged.  
If you push the throttle forward it will rev the engine without moving.
6. Push the 'Warm/Sync' button (for 1 second) and the gear will be engaged. You can now drive the boat with the throttle.
7. Before untying the and leaving the moorings test the throttle is working in forward and reverse by gently pushing the throttle slightly in both directions. Once you're confident the boat is responding to the throttle you can untie from the moorings and head off.

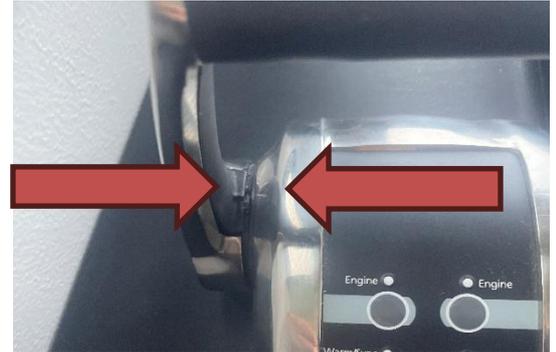

If you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).

## Bow and Stern Thrusters



This is the control for your bow and stern thrusters.

To turn this on you need to push the 'on' button twice.


You can then move the lever at the top to either side for bow thrusters and the same at the bottom for stern thrusters.

## WIFI

This boat is connected to our new unlimited WiFi. To connect to your onboard WiFi, you will need to go into your device's WiFi settings and select: "BarnesBrinkcraft WiFi"

You should then be taken to a login page that asks you to accept the Terms and Conditions.

# HEATING CONTROL

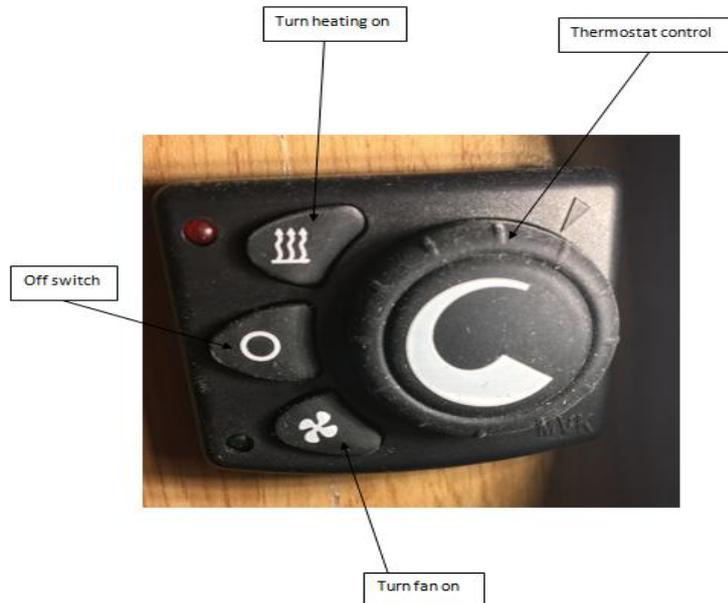

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

## HOW TO WORK YOUR HEATING SYSTEM

switch heating on as shown on opposite page.

allow 10 minutes for the system to start and heat to come through.

if heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

set the temperature to maximum, and check the boat batteries are charged. if necessary start engine to charge batteries.

if this does not work please call the on call engineer. 01603 782625.

when heater is switched off it will continue to run for up to 10 minutes while it cools itself down.



All controls are pushed down to turn on.

**Controls: Left to right:**

**1<sup>st</sup> & 2<sup>nd</sup>:** bilge pumps

**3<sup>rd</sup> :** windscreen wipers

**4<sup>th</sup>:** not in use

**5<sup>th</sup>:** Horn

**6<sup>th</sup>:** Reversing camera



You have a touch screen at the helm. This shows you a variety of information about the boat including speed, water levels, fuel levels and battery levels. We recommend familiarizing yourself with these controls before heading off.

## Your boat controls



### **Toilet pump:**

Push left to fill bowl and push right to pump the toilet out.



**Shower pump:** this will drain the water from the shower tray. You will need to do this periodically whilst using the shower.



In the galley you have 3 plug sockets and 2 USB sockets, to access these you need to pull the silver tab up on the top. You can push these back down level with the counter surface when not in use.



Emergency battery isolator – emergency use only

Under back rest cushion in saloon.

Emergency Winch Isolator:



Located under the front seat in the saloon. Remove back and seat cushions. The switch is located UNDER the edging around the seat in the corner closest to the door.

