



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO SERENADE 6

THE BOATYARDS NAME IS	BARNES BRINKCRAFT RIVERSIDE ROAD WROXHAM NR12 8UD
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	SERENADE 6 (ELITE CLASS)

BOAT INFORMATION

TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	39FT (11.8M)
WIDTH	12FT (3.55M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	7FT (2.14M)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	PASSES UNDER ALL BRIDGES AT SUITABLE TIDES Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.
BERTHS	2 DOUBLES & 2 SINGLES OR 1 DOUBLE & 4 SINGLES IN 2 CABINS & SALOON
BED SIZES	SEE BOAT LAYOUT
BATHROOM	2 ENSUITE BATHROOMS WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - SWITCH IN PANEL ON WALL BACK SHOWER - SWITCH PANEL UNDER SINK
COOKING FACILITIES	ELECTRIC 2 RING INDUCTOR & MICROWAVE COMBI
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 5000w SOLAR
WIFI?	YES (LIMITED)
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	8
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	6 (4+2)
ADDITIONAL INFORMATION	- FORWARD RAISED STEERING POSITION - SPLIT SLIDING CANOPY - INTEGRAL BATHING PLATFORM FOR EASY ACCESS - QUIET HYDRAULIC DRIVE ENGINE - HAIR DRYER - LICENSED FOR 6 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

Throttle Controls

This boat has single steering position. Your boat will have the throttle controls pictured below in both positions.

The throttle controls the speed of the boat. The further forward you push it the faster it will go and the further back you pull it the faster it will go in reverse.

How to start your boat:

1. check your throttle is in neutral. You can check this by making sure both the small triangle and notch on the inside on the throttle are lined up.
2. Put keys in ignition and turn to start the boat, both engine lights will come on.
3. Press 'Command' on the controls you'll need to push the button for 1 second, and you will see the light come on above the command button. If the lights don't come on it means the boat is probably not in neutral, check and try again.
4. The 'Warm/Sync' light will now be flashing. This means the gear control is disengaged.
If you push the throttle forward it will rev the engine without moving.
5. Push the 'Warm/Sync' button (for 1 second) and the gear will be engaged. You can now drive the boat with the throttle.
6. Before untying and leaving the moorings gentle test the throttle is working in forward and reverse by gently pushing the throttle slightly in both directions. Once you're confident the boat is responding to the throttle you can untie from the moorings and head off.




If you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).

Please make sure the curtains are left in forward position before opening the roof Thank you

Serenade

- Fri/Mon start (1, 5+7) or Sat/Tues (2, 3, 4, 6+8) start - 2 double & 2 singles or 1 double & 4 singles in 2 cabins & saloon -

- 2 toilets/showers in 2 ensuites -

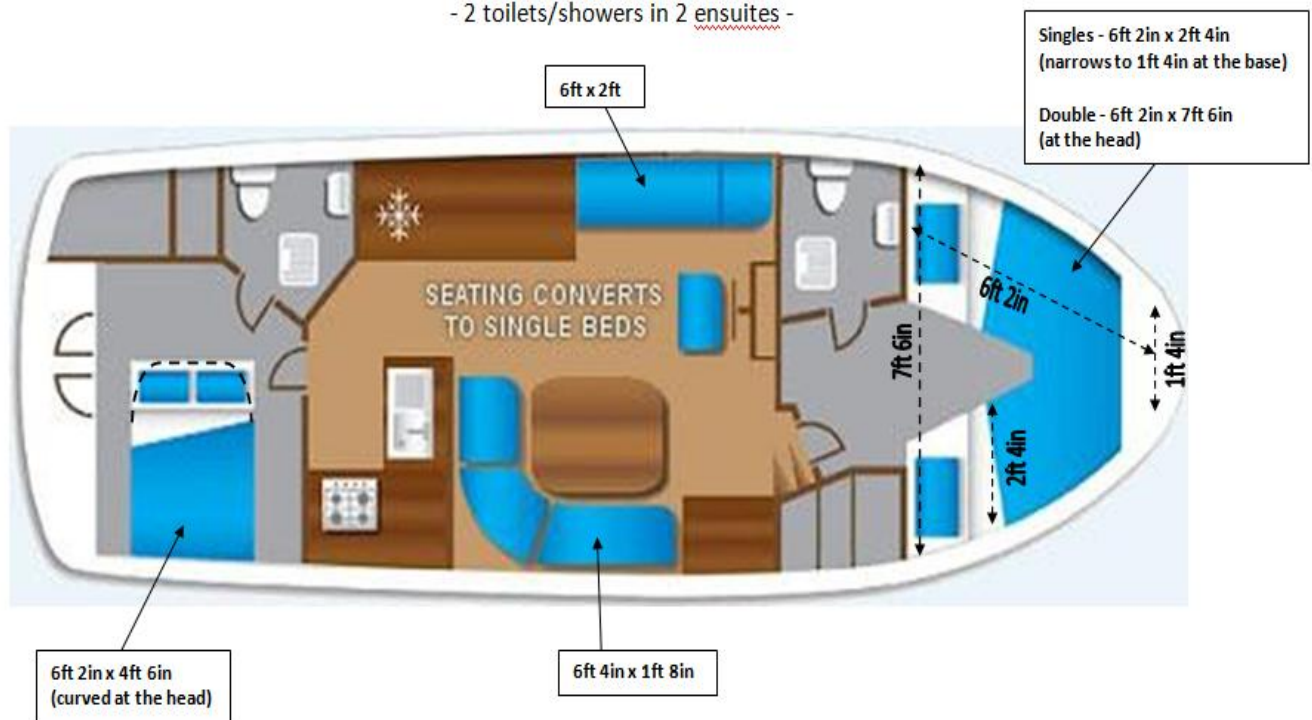


WIFI CONNECTION

To connect to your onboard Wifi, you will need to go into your Wifi settings and select "Brinkcraft-guest".

You should be taken to a login page asking you to register by e-mail. The first 1Gb is free of charge. Thereafter you can purchase further Gb of data - the prices will appear on screen.

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

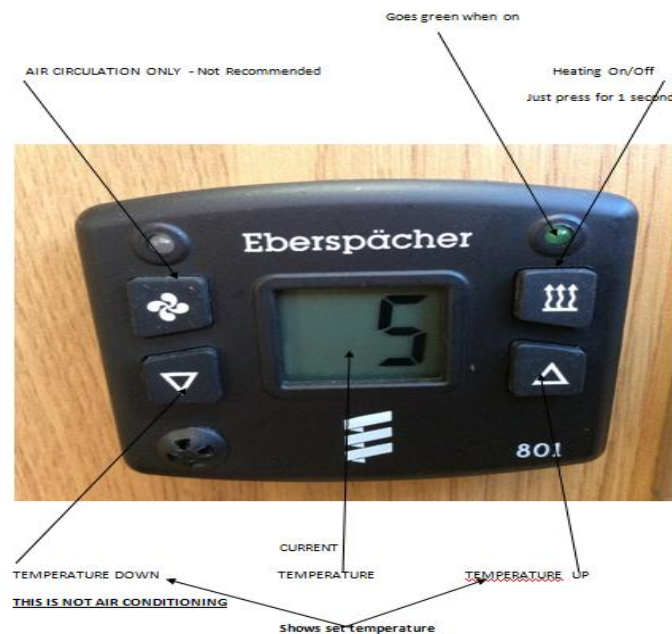

HOW TO WORK YOUR HEATING SYSTEM

SWITCH HEATING ON AS SHOWN ABOVE.

ALLOW 10 MINUTES FOR THE SYSTEM TO START AND HEAT TO COME THROUGH.


IF HEATER DOES NOT START AFTER 10 MINUTES IT MAY BE THAT THE TEMPERATURE IN THE BOAT IS HIGHER THAN SET.

SET THE TEMPERATURE TO MAXIMUM, AND CHECK THE BOAT BATTERIES ARE CHARGED. IF NECESSARY START ENGINE TO CHARGE BATTERIES.

IF THIS DOES NOT WORK PLEASE CALL THE ON CALL ENGINEER ON 01603 782625

WHEN HEATER IS SWITCHED OFF IT WILL CONTINUE TO RUN FOR UP TO 10 MINUTES WHILE IT COOLS ITSELF DOWN.

Control panel:

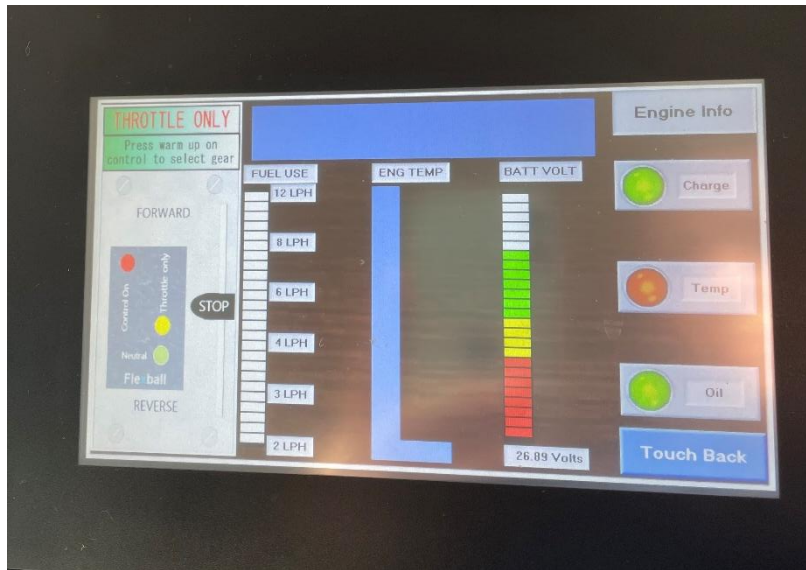

You have this control panel onboard your boat. It is all touchscreen and displays various information about the boat including fuel usage, engine temperate and battery voltage. You can also find extra boat information here including how to operate your helm seat. The helm seat is moved using these controls.

