



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO TEMPO 1

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625
THIS BOAT IS NAMED	TEMPO 1 (ELITE CLASS)

BOAT INFORMATION

TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	35FT (10.67M)
WIDTH	12FT (3.66M)
STEERING	DUAL
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	N/A
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	8FT (2.44M) NOTE: ALSO, LOWER AERIAL
BRIDGE CLEARANCE	WILL NOT PASS UNDER WROXHAM BRIDGE POTTER HEIGHAM BRIDGE OR BECCLES OLD BRIDGE Weather conditions and tide affect river levels so caution should be exercised at all bridges and please check the bridge clearance gauge carefully.
BERTHS	3 DOUBLE BERTHS 2 CABINS & SALOON
BED SIZES	SEE BOAT LAYOUT
HOW TO MAKE UP SALOON BED	DROP ELECTRIC TABLE LEVEL WITH SEATS LIFT UP CENTRE SEAT TO FIND THE CUSHION SLOT CUSHION IN
BATHROOM	1 BATHROOM (WET ROOM) & 1 ENSUITE WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	BACK SHOWER - SWITCH INSIDE SHOWER WET ROOM - SWITCH ON TOILET PANEL
COOKING FACILITIES	INDUCTION 2 RING & MICROWAVE COMBI
FRIDGE/FREEZER	UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	14 – 2 IN GALLEY, 4 IN FOREPEAK, 4 IN SALOON, 4 IN AFT CABIN
WIFI	YES (LIMITED)
THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	6 (4+2)
ADDITIONAL INFORMATION	• HAIR DRYER • WIRELESS PHONE CHARGERS • BLUETOOTH SOUND SYSTEM • IDEAL FOR 2 COUPLES • FRONT BATHROOM IS A WET ROOM • FUEL-EFFICIENT LOW EMISSION ENGINE, UTILISING SOLAR PANELS & LATEST LITHIUM BATTERIES FOR A FASTER CHARGE • ADDITIONAL ROOF LIGHTS & ELECTRIC SUNROOF FOR MORE INTERIOR LIGHT • FRAMELESS BONDED WINDOWS • SIMILAR LAYOUT TO CONCERTO BUT WITH MORE SEATING SPACE IN THE SALOON • LICENSED FOR 9 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION

This boat is connected to our new unlimited WiFi. To connect to your onboard WiFi, you will need to go into your device's WiFi settings and select: "BarnesBrinkcraft WiFi"

You should then be taken to a login page that asks you to accept the Terms and Conditions.


Tempo

- Sat/Tues start - 3 doubles in 2 cabins & saloon - 2 toilets/showers in 1 bathroom & 1 wet room -



HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL

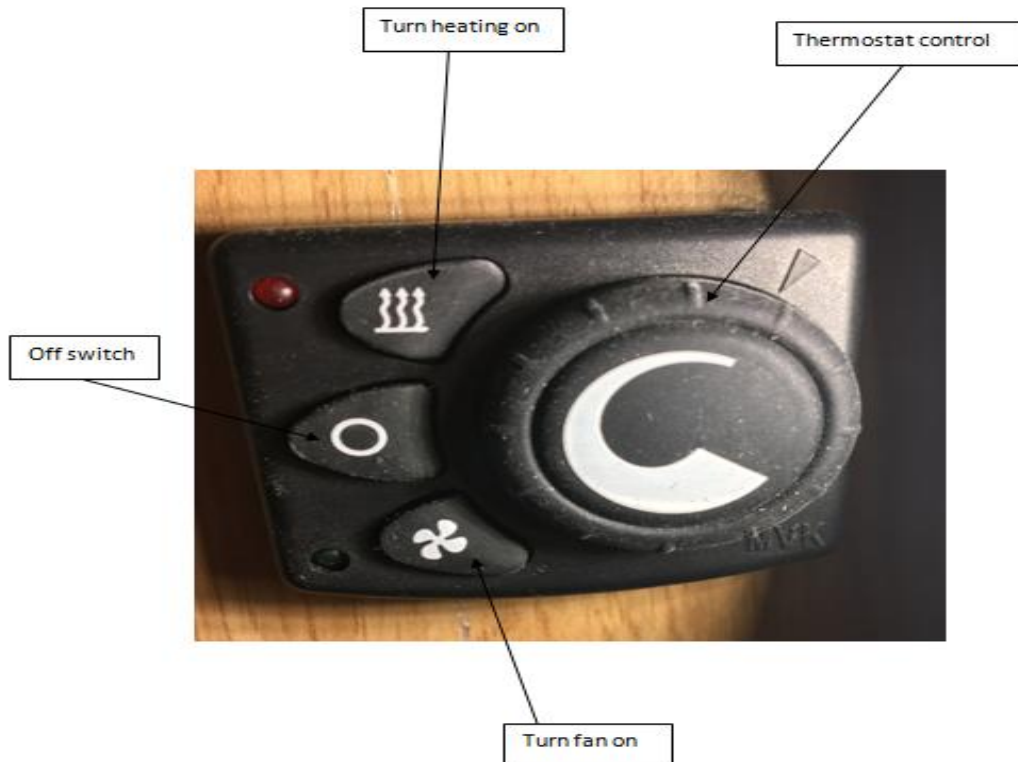

HOW TO WORK YOUR HEATING SYSTEM

switch heating on as shown above.

allow 10 minutes for the system to start and heat to come through.

if heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

set the temperature to maximum, and check the boat batteries are charged. if necessary start engine to charge batteries.

if this does not work please call the on call engineer on 01603 782625

when heater is switched off it will continue to run for up to 10 minutes while it cools itself down.


Throttle Controls

This boat has upper and lower steering positions. Your boat will have the throttle controls pictured below in both positions.

The throttle controls the speed of the boat. The further forward you push it the faster it will go and the further back you pull it the faster it will go in reverse.

How to start your boat:

1. check your throttle is in neutral. If your boat has dual control check both throttles are in neutral. You can check this by making sure both the small triangle and notch on the inside on the throttle are lined up.
2. Put keys in ignition, turn key and push start button to start the boat, both engine lights will come on.
3. Press 'Command' on the controls you will be using (either upper or lower helm). You'll need to push the button for 1 second, and you will see the light come on above the command button. If the lights don't come on it means the boat is probably not in neutral, check and try again.
4. The 'Warm/Sync' light will now be flashing. This means the gear control is disengaged.
If you push the throttle forward it will rev the engine without moving.
5. Push the 'Warm/Sync' button (for 1 second) and the gear will be engaged. You can now drive the boat with the throttle.
6. Before untying and leaving the moorings gentle test the throttle is working in forward and reverse by gently pushing the throttle slightly in both directions. Once you're confident the boat is responding to the throttle you can untie from the moorings and head off.

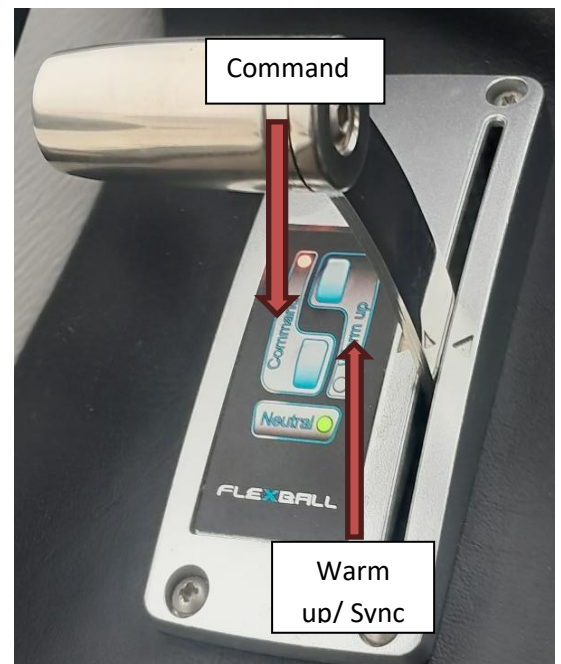


Changing driving position:

1. When changing from one control to another you need to make sure BOTH throttles are in neutral (step 1 above)
2. Move to your desired driving position.
3. Hold the command button on the throttle for 1 second to engage, the light will come on when the command is engaged.
4. You can now control the boat from this driving position.

We recommend only changing controls/steering positions while the boat is moored. If you have just changed controls while moored, gently check forward and reverse gear at the control you wish to use are working correctly, before untying the boat and leaving the mooring.

Again, if you are not sure how to operate the boat or have any other concerns, please call our team (01603 782625).

Control Panel

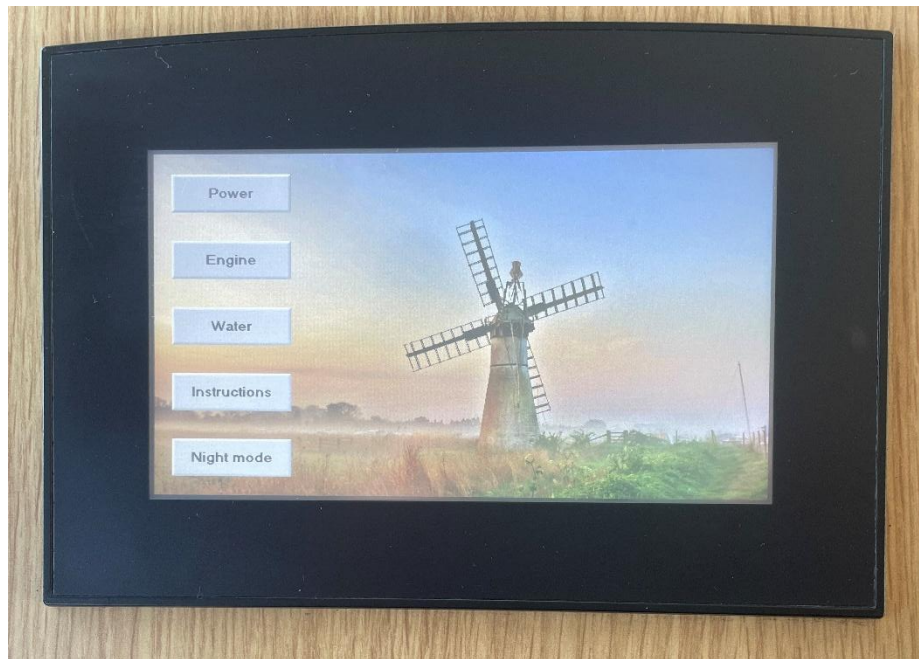

This is the main screen on the control panel on board. You can turn on your water immersion here, monitor speed, check battery levels, water levels and fuel levels. The screen also has many other functions and instructions about your boat. We recommend becoming familiar with the controls before heading off. You will be shown how to use your control panel during your trial run but if you are uncertain or have any questions, please call us on 01603 782625.

Sunroof control



This button controls your sunroof. When opening this please make sure all covers are removed first. Hold the button to open and close.